

## חשוב

### כללי בטיחות

קראו, הבינו ופעלו בקפידה בהתאם לכל ההוראות לפני ההתקנה והשימוש במוצר זה. שמרו את ההוראות לעיון עתידי.

# SX 925

משאבת חול קריסטל קליר

מספר דגם מאושר SF40220

220 - 240 וולט~, 50 הרץ, 90 וואט

IPX4 ,Hmin 0.19 m ,Hmax 3.0 m

טמפרטורת מים מרבית 35 מעלות צלזיוס



למטרות המחשה בלבד.

אל תשכחו לנסות את המוצרים הבאים של אינטקס: בריכות, אביזרים נלווים לבריכות, בריכות מתנפחות וצעצועים לבית, מיטות אוויר וסירות אותם ניתן להשיג אצל המשווקים המורשים.

בשל המדיניות של שיפור מוצרים תמידי, אינטקס שומרת על הזכות לשנות את המפרטים והמראה של מוצרים, דבר שעשוי להוביל לעדכון הוראות שימוש אלו ללא התראה מראש.

הוראות שימוש

# INTEX®

© 2021, אינטקס שיווק בע"מ, אינטקס פיתוח בע"מ, אינטקס פנאי.

כל הזכויות שמורות לאלפיט טויס בע"מ.

® הסמלים המסחריים משמשים במספר מדינות תחת רישיון מאינטקס שיווק בע"מ.

www.intexcorp.com

## תוכן עניינים

3.....	אזהרות.....
4-5.....	רשימת חלקים
6-10 .....	הוראות התקנה.....
6 .....	מפרט המוצר.....
11-13.....	הוראות הפעלה.....
14.....	לוח זמני הפעלת בריכות אינטקס.....
15 .....	לוח זמני הפעלת בריכות שאינן של אינטקס.....
16 .....	תחזוקה.....
16 .....	אחסון לטווח ארוך.....
17.....	מדריך פתרון בעיות.....
18 .....	בעיות נפוצות בבריכות.....
18.....	בטיחות כללית במים.....
19 .....	אחריות מוגבלת.....

## כללי בטיחות חשובים

יש לקרוא, להבין ולפעול בהתאם לכל ההנחיות בקפידה לפני התקנת מוצר זה והשימוש בו.

### יש לקרוא את כל ההוראות ולפעול לפיהן





#### אזהרה

- יש להשגיח בכל עת על ילדים ואנשים בעלי מוגבלויות.
- יש להרחיק ילדים ממוצר זה ומכבל החשמל.
- אין לאפשר לילדים לשחק במכשיר. אין לאפשר לילדים לנקות את המכשיר או לתחזק אותו ללא פיקוח.
- ילדים מעל לגיל 8 ואנשים בעלי מוגבלות פיזית, סנסורית או מנטאלית, או אנשים חסרי ניסיון וידע מתאימים יכולים להשתמש במכשיר זה אם מפקח עליהם או מנחה אותם אדם אחראי בנוגע לשימוש הבטוח במכשיר, ואם הם מבינים את הסכנות הכרוכות בשימוש בו.
- רק מבוגר רשאי להרכיב ולפרק מכשיר זה.
- סכנת התחשמלות. יש לחבר מוצר זה רק לשקע עם הארקה המוגן על ידי מפסק פחת. צרו קשר עם חשמלאי מוסמך אם אינכם יכול לזווד שהמכשיר מוגן על ידי ממסר פחת. יש להיעזר בחשמלאי מוסמך להתקנת ממסר פחד בדירוג מרבי של 30 מיליאמפר. אין להשתמש בממסר פחת נייד.
- יש לנתק מוצר זה מהחשמל לפני הוצאה, ניקוי, טיפול או ביצוע שינויים כלשהם במוצר.
- התקע צריך להיות נגיש אחרי התקנת המוצר.
- אין לקבור את הכבל המאריך. יש למקם את הכבל במקום בו הוא לא ייפגע על ידי מכסחת דשא, קוצץ גדרות וציוד אחר.
- אם כבל החשמל ניזוק, יש להביא את המכשיר למרכז שירות או לטכנאי שירות מוסמך לצורך החלפתו וכדי למנוע סכנה.
- להפחתת סכנת התחשמלות, אין להשתמש בכבלים מאריכים, קוצבי זמן, מתאמים לשקע או ממירי מתח לצורך חיבור המכשיר לחשמל. יש לדאוג לשקע במיקום מתאים.
- אין לנסות לנתק או לחבר את המוצר מהחשמל בזמן שאתם עומדים במים או כשידיכם רטובות.
- יש להרחיק את המוצר למרחק של לפחות 2 מטרים מהבריכה.
- יש להרחיק את המוצר למרחק של מעל ל-3.5 מטרים מהבריכה.
- מקם מוצר זה הרחק מהבריכה כדי למנוע מילדים לטפס עליו ולהיכנס כך לבריכה.
- אין להפעיל מוצר זה כשיש אנשים בתוך הבריכה.
- מוצר זה מיועד לשימוש עם בריכות ניתנות לאחסון בלבד. אין להשתמש במוצר עם בריכות בהתקנה קבועה. בריכה הניתנת לאחסון בנויה כך שניתן לפרק אותה בקלות לאחסון ולהרכיבה מחדש לתצורה המקורית שלה.
- להפחתת סכנת הילכדות, אין להיכנס לבריכה אם מסנן השאיבה משוחרר, שבור, סדוק, פגום או חסר. יש להחליף חלקי מסנן שאיבה משוחררים, שבורים, פגומים, סדוקים או חסרים באופן מיידי.
- אין לשחק או לשחות בקרבת חיבורי שאיבה. גופכם או שערכים עלולים להילכד ברכיבים אלו, מה שיגרום לפציעה קשה ואף לסכנת טביעה.
- למניעת נזק לציוד וסכנת פציעה, יש לכבות את המשאבה לפני החלפת מיקום בורר בקרת המסנן.
- אין להפעיל מוצר זה מעל לחץ העבודה המרבי המצוין על מכל המסנה.
- לחץ מסוכן. הרכבת כיסוי בורר מכל באופן לא נכון עלולה לגרום לכיסוי הבורר לעוף ולפציעה קשה, נזק לרכוש ואף למוות.
- מוצר זה מיועד לשימוש אך ורק למטרות המתוארות במדריך זה!

אי הצמדות להוראות אלו עלולה לגרום לנזק לרכוש, להתחשמלות, לפציעה גופנית חמורה ואף למוות.

## רשימת חלקים

לפני הרכבת המוצר, יש להקדיש מספר דקות לבדיקת תכולת הערכה ולהכרת כל חלקיה.

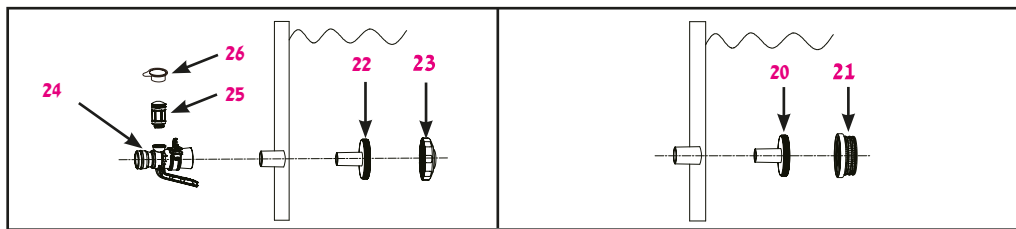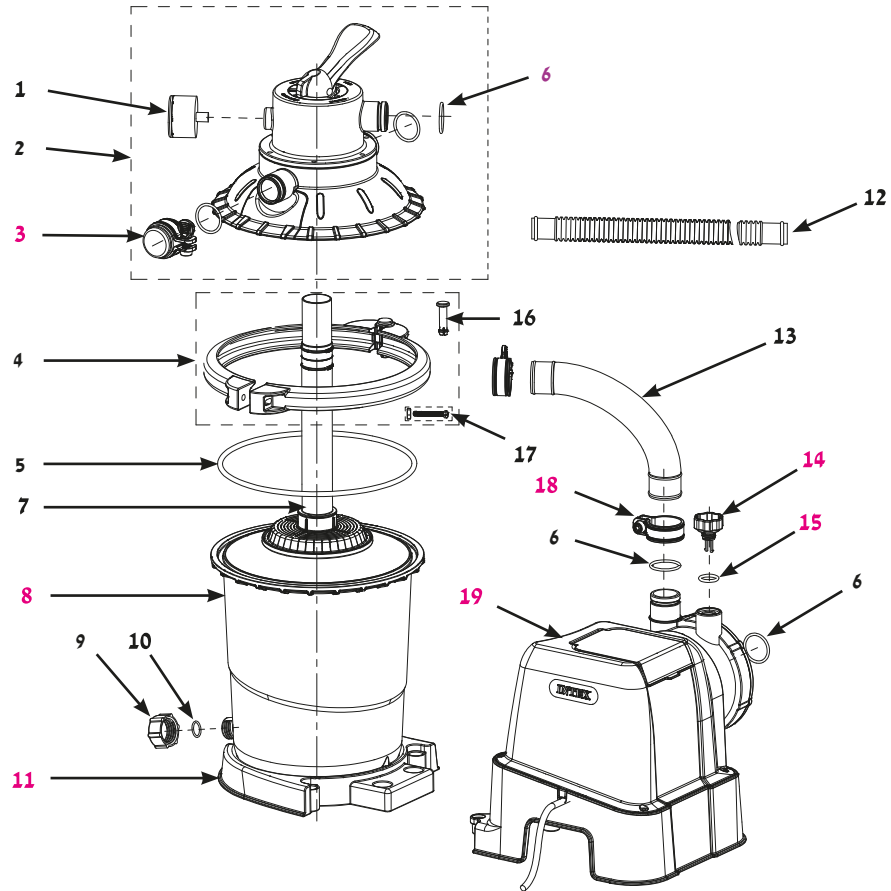

שירות להזמנת חלקים אלו במידת הצורך.  
 הערה: האוורים נועדו למטרות המחשה בלבד. המוצר עצמו עשוי להיות שונה. האוורים אינם בקנה מידה.

## רשימת חלקים (המשך)

לפני הרכבת המוצר, יש להקדיש מספר דקות לבדיקת תכולת הערכה ולהכרת כל חלקיה.

מספר חלק חלופי	כמות	תיאור	מספר סידורי
13078	1	מד לחץ	1
13079	1	מכסה מכל בורר 4 מצבים	2
13080	1	מכסה יציאת ניקוז	3
13081	1	מכלול תפס משאבה	4
13083	1	טבעת O של מכל	5
12947	5	טבעת O לצינור	6
13084	1	צינור מרכזי עם רשת מסנן	7
13082	1	מכל משאבת המסנן	8
11456	1	פקק שסתום ניקוז	9
11385	1	טבעת-O של שסתום ניקוז	10
13085	1	בסיס מכל משאבת החול	11
10399	2	צינור	12
13086	1	צינור מחבר משאבת חול	13
10725	1	•שסתום שחרור אוויר	14
10264	1	טבעת O של שסתום שחרור אוויר	15
11726	1	פין סגר משאבה	16
11727	1	בורג סגר משאבה	17
11489	6	תפס צינור	18
13090	1	מנוע משאבה	19
11070	1	מסנן עם הברגה	20
12197	1	מסנן רשת	21
12365	1	מחבר מסנן כניסת מים	22
12364	1	פיית סילון כניסת מים לבריכה	23
12368	1	מתאם אוויר בכניסת מים לבריכה	24
12363	1	שסתום סילון אוויר	25
12373	1	פקק שסתום סילון אוויר	26

חלקים אלו במידת הצורך.  
בעת הזמנת חלקים, יש להקפיד ולציין את מספר הדגם ומספר החלק.

## מפרט טכני

משאבת החול מסלקת חלקיקים הצפים במים, אך אינה מחטאת את הבריכה. ההרכב הכימי של מי הבריכה דורש ידע ספציפי. יש להיוועץ במרכז שירות באזור המגורים שלכם לפרטים.

חיבור לחשמל:	220-240 וולט ז"ח
הספק:	90 וואט
לחץ עבוד מרבי:	1 בר (15 psi)
אזור סינון אפקטיבי:	0.03 מ"ר
קצב זרימה במשאבה (מיציאת המשאבה):	3.5 מ"ר/שעה
חומר סינון מומלץ:	חול סיליקה מס' 20 או חול זכוכית. גודל חלקיקים טווח של 0.45 עד 0.85 מ"מ. מקדם אחידות קטן מ-1.75.
(לא כלול)	חול סיליקה מס' 20 במשקל 6.5 ק"ג או חול זכוכית במשקל 5 ק"ג.
כמות חומר סינון מומלצת:	

## הוראות הקמה




כלים נדרשים מברג פיליפס אחד

מיקום המשאבה והתקנה:

- יש להתקין את המערכת על בסיס מוצק ומאוזן וללא רעידות.
  - יש לדאוג למיקום המוגן מפגעי מזג האוויר, לחות, הצפה וקפאון.
  - יש לדאוג לגישה נאותה, מקום פנוי ותאורה לצורך תחזוקה שגרתית.
  - מנוע המשאבה זקוק לזרימת אוויר חופשית לצורך קירור. אין להתקין את המשאבה במקום לח או ללא אוורור.
- מומלץ ששני אנשים ירכיבו מוצר זה.

### התקנת מכל החול:

1. מקמו את בסיס תמיכת המכל במיקום הנבחר.
2. מקמו את המכל על בסיס תמיכת המכל (איור 1).
3. הכניסו אנכית את הצינור המרכזי אל תוך רשת המסנן (איור 2.1).
4. הכניסו אנכית את רשת המסנן ואת מכלול הצינור המרכזי למכל. וודאו שמכלול רשת המסנן מחוברת היטב לתחתית המכל ושהצינור המרכזי ממורכז אנכית

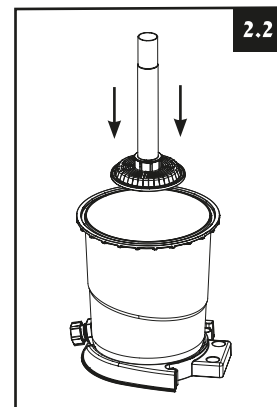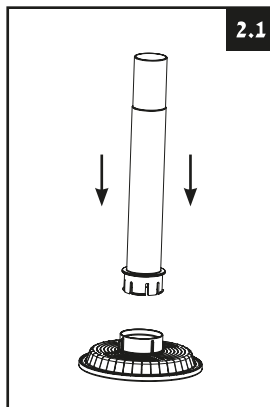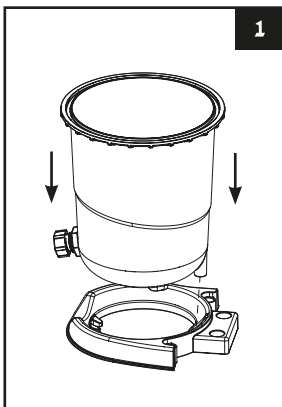


## הוראות התקנה (המשך)

### מילוי חול:

חשוב: יש להשתמש בחול סיליקה מס' 20 או בחול זכוכית עם חלקיקים בגודל של 0.45 עד 0.85 מ"מ ומקדם אחידות קטן מ-1.75. יש להשתמש בחומר סינון רק בהתאם למפורט בהוראות השימוש.

הערה: לפני טעינת המכל בחול, יש לוודא שמכלול רשת הסינון והצינור המרכזי מחוברים למקומם בקרקעית המכל, ושהצינור המרכזי (7) ממורכז אנכית במכל.

1. למניעת נפילת חול אל הפתח העליון של הצינור המרכזי בזמן הכנסת החול, כסו את הפתח העליון של הצינור המרכזי בכוס או חפץ דומה (איור 3).
2. כשאדם אחד מחזיק את הצינור המרכזי כדי להשאיר אותו ממורכז, שפכו את החול אל תוך המכל בקצב איטי באמצעות היד למניעת תזוזה של מכלול רשת המסנן (איור 4).

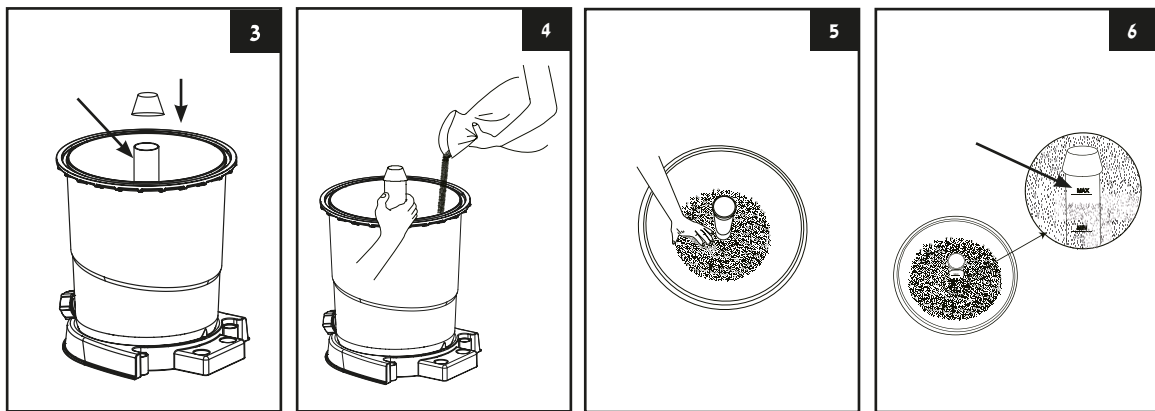

3. מלאו את המכל בערך עד החצי תחילה כדי לחלק באופן אחיד את החול בתוך המכל, ואז מלאו את המכל במים ליצירת אפקט ריפוד כששאר החול נשפך לתוך המכל. כך תמזערו את רעידות רשת המסנן (איור 5).
4. יש למלא חול בין סימון MAX לסימון MIN שעל הצינור המרכזי. פזרו באופן אחיד את החול ואזנו אותו ביד (איורים 5 ו-6).
5. הסירו את כיסוי המגן מהחלק העליון של פתח הצינור המרכזי.
6. שטפו את כל החול סביב הקצה העליון של המכל.

חשוב: ודאו שהצינור המרכזי (7) נשאר ממורכז אחרי השלמת טעינת החול ולפני שתמשיכו לשלב הבא.

## הוראות התקנה (המשך)





### אזהרה

הרכבת בורר מכל ותפס באופן לא נכון עלולה לגרום לבורר ולתפס לעוף ובכך לפציעה קשה, נזק לרכוש ואף למוות.


#### התקנת בורר 4 מצבים:

1. וודאו כי טבעת O של המכל (5) נמצאת במקומה (איור 7). הערה: וודאו כי טבעת O של המכל נקייה מחול ולכלוך.
2. הורידו את כיסוי הבורר 4 מצבים מעל למכל לאט וודאו שצינור המעקף הבולט מתחת לכיסוי הבורר 4 מצבים מתאים היטב לפתח העליון של הצינור המרכזי (7) (איור 8). וודאו שטבעת ה-O מחוברת היטב בין הקצה העליון של חריץ המכל וקצה כיסוי הבורר 4 מצבים. חשוב: ודאו כי רכס כיסוי הבורר 4 מצבים מותאם לחריץ שבטבעת המכל.

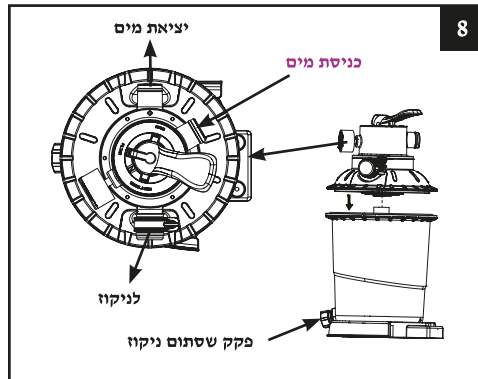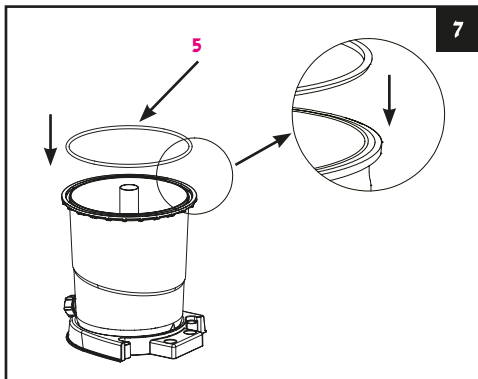

3. חשוב: לבורר 4 מצבים יש שלוש כניסות לחיבור צינור. ודאו כי חיבור היציאה (מהמסנן לבריכה) בבורר פונה לעבר הבריכה (איור 9).





3. הוציאו את הבורג והתקינו את התפס סביב המכל ואת עוגני הבורר 4 מצבים. לאחר מכן החזירו את הבורג והשתמשו במברג פיליפס (לא כלול בערכה) כדי להבריג אותו (איורים 9 ו-10).

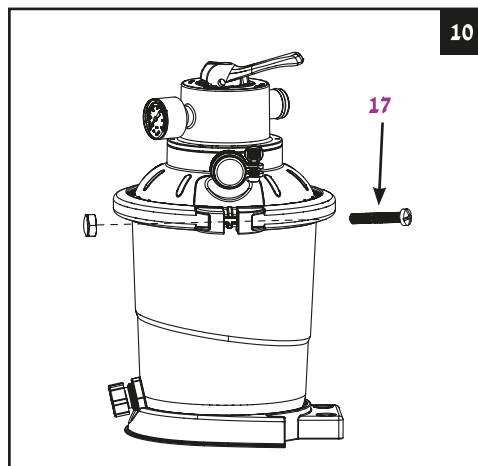

## הוראות התקנה (המשך)

### התקנת המנוע:

1. וודאו שטבעת ה-**ס** של הצינור (6) ממוקמת על יציאת מנוע המשאבה. חברו את צינור החיבור הפנימי של משאבת המסנן (13) אל יציאת מנוע המשאבה עם תפס צינור (איור 11).
2. חברו את יחידת מנוע המשאבה לבסיס תמיכת המכל (איור 12.1).  
**חשוב:** מדינות מסוימות, במיוחד בקהילה האירופית, דורשות קיבוע של המוצר לקרקע או לבסיס במצב אנכי קבוע. בדקו עם הרשויות המקומיות האם קיימת תקנה באזור המגורים שלכם לגבי משאבות סינון לבריכת שחייה מעל הקרקע. אם כן, ניתן להרכיב את המוצר על פלטפורמה באמצעות שני החורים הממוקמים בבסיס. איור 12.2. ניתן להרכיב את המוצר על בסיס מלט או על פלטפורמת עץ כדי למנוע התהפכות בשוגג.
  - חורי ההרכבה הם בקוטר 6.4 מ"מ במרווח זה מזה של 163 מ"מ.
  - השתמשו בשני ברגים ובאומי נעילה בקוטר מקסימלי של 6.4 מ"מ.
3. וודאו שטבעת ה-**ס** של הצינור (6) ממוקמת על חיבור הכניסה לבורר 4 מצבים. חברו את צינור החיבור הפנימי של משאבת המסנן (13) אל חיבור כניסת הבורר 4 מצבים עם תפס צינור (איור 13).

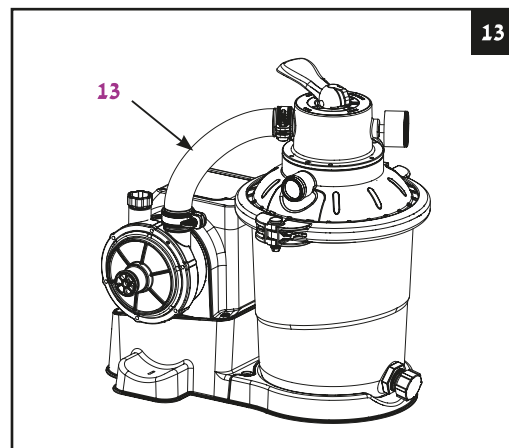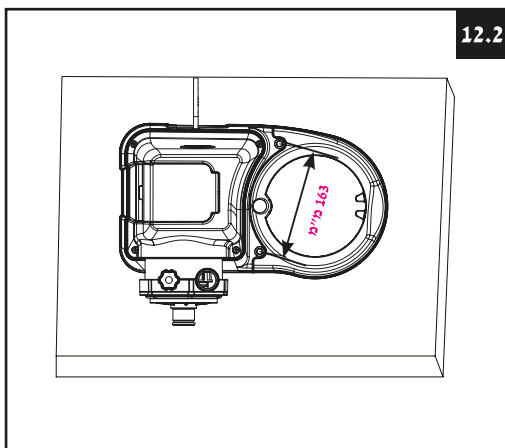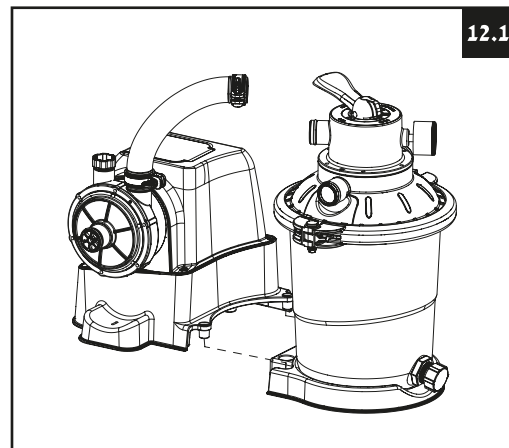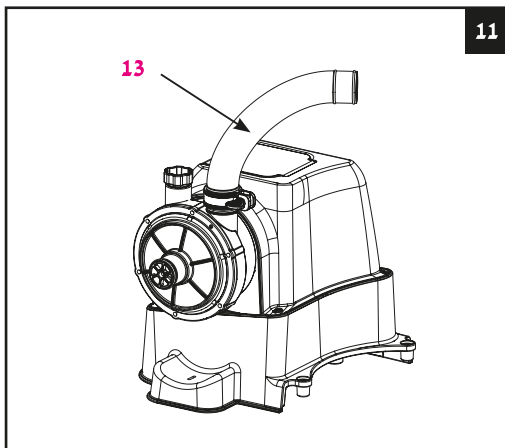







## הוראות ההפעלה

### ⚠ אזהרה

- סכנת התחשמלות. יש לחבר מוצר זה רק לשקע עם הארקה המוגן על ידי מפסק פחת. צרו קשר עם חשמלאי מוסמך אם אינכם יכול לזוודא שהמכשיר מוגן על ידי ממסר פחת. יש להיעזר בחשמלאי מוסמך להתקנת ממסר פחת בדרוג מרבי של 30 מיליאמפר. אין להשתמש בממסר פחת נייד.
- להפחתת סכנת התחשמלות, אין להשתמש בכבלים מאריכים, קוצבי זמן, מתאמים לשקע או ממירי מתח לצורך חיבור המכשיר לחשמל. יש לדאוג לשקע במיקום מתאים.
- אין לנסות לנתק או לחבר את המוצר מהחשמל בזמן שאתם עומדים במים או כשידיכם רטובות.
- אין להפעיל מוצר זה מעל ללחץ העבודה המרבי המצויין על מכל המסנן.
- יש לכבות את המשאבה לפני שינוי מיקום הבורר 4 מצבים.
- הפעלת מכשיר זה ללא מים הזורמים במערכת עלולה לגרום להצטברות לחץ מסוכן שעלול לגרום למצב נפיץ, פציעה קשה, נזק לרכוש או למוות.
- אין לבדוק משאבה זו באמצעות לחץ אוויר. אין להפעיל את המערכת אם טמפרטורת המים גבוהה מ-35 מעלות צלזיוס.

### מצבי ופעולות הבורר 4 מצבים:

מיקום הבורר	פעולה	כיוון זרימת המים
מסנן (איור 14)	סינון רגיל ושאיבה סדירה של הבריכה	מהמשאבה דרך חומר הסינון ואל הבריכה
BACKWASH (שטיפה לאחור) (איור 15)	הופך את זרימת המים לניקוי חומר הסינון	מהמשאבה דרך חומר הסינון ואל יציאת הפסולת/ניקוז של הבורר
RECIRCULATE (סירקולציה מחדש) (איור 16)	להזרמת מים בחזרה לבריכה מבלי לעבור דרך חומר הסינון	מהמשאבה דרך הבורר אל הבריכה תוך עקיפת חומר הסינון
DRAIN (ניקוז) (איור 17)	לשאיבה ישירות לפסולת. הורדת גובה מי הבריכה או ריקון הבריכה	מהמשאבה ליציאת הפסולת/ניקוז של הבורר תוך עקיפת חומר הסינון

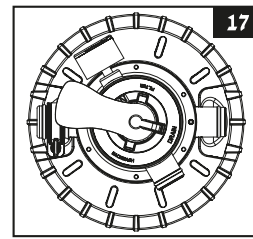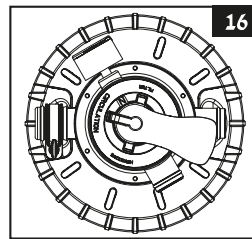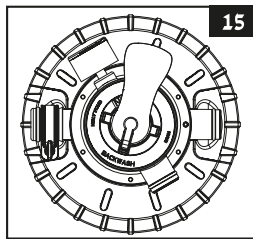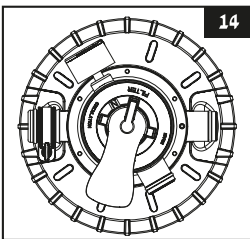

### תיאור לוח הבקרה:

לחצן קוצב זמן	לחצן נעילה / פתיחה	לחצן הפעלה/כיבוי
---------------	--------------------	------------------

הגדרה	תצוגת LED
מצב המתנה (הפעלה / סיום מחזור הפעלה)	00
שעת הפעלה מינימלית (שעה אחת נותרה)	01
שעות פעילות (נותרו 2 - 11 שעות)	02-11
שעות פעילות מרביות (נותרו 12 שעות)	12
מד זמן כבוי (משאבה פועלת ברציפות)	FP
מצב חיסכון בחשמל	•


## הוראות הפעלה(המשך)

### הפעלה ראשונית ותפעול:

#### לפני ההפעלה, יש לוודא כי:

- כל הצינורות חוברו וחוזקו היטב, וכמות חול הסינון הנכונה הוכנסה.
- כל המערכת מחוברת לשקע עם הארקה ולממסר פחת.

#### 1. שחרור אוויר מהמערכת - וודאו שיציאת הניקוז/פסולת בבורר 4 מצבים

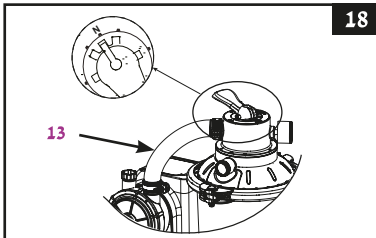

לא מכוסה, וכוונו אותה לכלי ניקוז מתאים. וודאו שהמשאבה כבויה. העבירו את הבורר 4 מצבים למצב N. פתחו את הברגת שסתום שחרור האוויר (14) מצינור המנוע (איור 18). כשהמים מתחילים לזרום החוצה משסתום שחרור האוויר, סגרו שוב את שסתום שחרור לחץ האוויר.


#### 2. BACKWASH (שטיפה לאחור) - ודאו שהמשאבה כבויה. לחצו על

הבורר 4 מצבים וסובבו אותו למצב BACKWASH

(שטיפה לאחור) (איורים 15 ו-19).

#### חשוב: למניעת נזק לבורר 4 מצבים, לחצו על המנוף לפני שתסובבו

אותו. כבו את המשאבה לפני שינוי מיקום הבורר 4 מצבים.

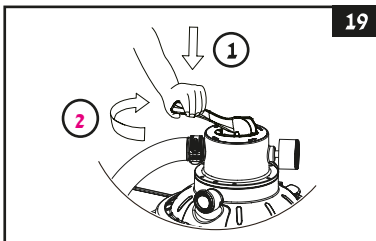

#### 3. לחצו על כדי להפעיל את המערכת, ואז לחצו על כדי להגדיר

את קוצב זמן ההפעלה (פנו לסעיף "הפעלת המערכת במצב TIMER (קוצב זמן) או ידנית" לפרטים). המים יזרמו לאחור דרך החול ואל יציאת הפסולת/ניקוז. בצעו שטיפה לאחור עד שמים נקיים יזרמו דרך יציאת הפסולת/ניקוז.

#### הערה: אם התצוגה מראה 00 מהבהב, המכשיר במצב המתנה והמשאבה לא תפעל.

מומלץ לבצע שטיפה לאחור ראשונית של המסנן כדי לנקות לכלוכים או חלקיקי חול עדינים שבחול המשאבה.

#### 4. כבו את המשאבה, שנו את מיקום הבורר 4 מצבים (איור 14).

#### 5. הפעילו את המשאבה. המערכת פעלת כעת במצב סינון רגיל. הפעילו את המשאבה עד להשגת צלילות מי

בריכה כנדרש ולא יותר מ-12 שעות ביום. בהפעלה הראשונה, מומלץ להגדיר את המערכת לזמן פעולה ארוך יותר או למצב FP כדי שהמשאבה תפעל ברציפות ללא קוצב הזמן.

#### 6. תעדו את קריאת מד הלחץ הראשונית בזמן שחומר הסינון (החול) נקי.

#### הערה: במהלך ההפעלה הראשונית של המערכת, ייתכן שתצטרכו לבצע שטיפה לאחור לעיתים קרובות בשל


לכלוכים חריגים וכבדים הנמצאים במים ובחול. לאחר מכן, ככל שהחול יוציא לכלוך ממי הבריכה, הצטברות הלכלוך בחול תגרום לחץ לעלות ולזרימה לרדת. אם אין התקן שאיבה המחובר למערכת ומד הלחץ מצביע על האזור הצהוב הרי שהגיע הזמן לשטיפה לאחור של החול. פנו לסעיף BACKWASH (שטיפה לאחור) בחלק "הפעלה ראשונית ותפעול".

התקן שאיבה (למשל מנקה בריכה אוטומטי של אינטקס) המחובר למערכת עדוי גם הוא לגרום לזרימה לפחות וללחץ לעלות. הסירו התקני שאיבה כלשהם מהמערכת ובדקו אם קריאת מד הלחץ ירדה מהאזור הצהוב לאזור הירוק.

#### 7. נטרו על בסיס שבועי את קריאת מד הלחץ ובדקו שפתחי יציאת וכניסת המים לא חסומים. אם מד הלחץ

מצביע על האזור הצהוב, הרי שהגיע הזמן לשטיפה לאחור של חול הסינון.


## הוראות הפעלה (המשך)

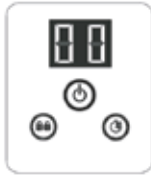

**הפעלת המערכת במצב TIMER (קוצב זמן) או ידני:**  
**הפעלת משאבת החול במצב FILTER (מסנן) תחת בקרת TIMER (קוצב זמן):**  
**1. הפעילו את היחידה:**

- לחצו על כפתור 1. הקוד 00 יהבהב בתצוגה, כדי לציין שהיחידה מוכנה לתכנות.
- הגדירו את שעות הפעילות:

כאשר הקוד "00" מהבהב, לחצו על לחצן 2 כדי להגדיר את שעות הפעולה הרצויות. עיינו ב"טבלת זמני ההפעלה" לשעות ההפעלה הנדרשות בנוגע לכל גודל בריכה. לחיצה על לחצן 3 תאריך את הזמן משעה עד 12 שעות לכל היותר.

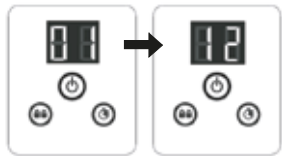

(1 עד 12 שעות לכל מחזור)

אם בחרתם יותר מדי שעות המשיכו לחוץ על לחצן 3 כדי לחזור על המחזור. קוצב הזמן המובנה יפעיל את משאבת החול באותו הזמן בכל יום, עבור מספר השעות שהגדרתם.


**3. נעילת פקדי לוח המקשים:**

כאשר ערך השעה הרצוי מוצג, לחצו על לחצן 4 עד שתשמעו צפצוף. נעילת כפתורי הבקרה בהגדרה זו מונעת שינוי בלתי מורשה של מחזור ההפעלה.  
**הערה: אם שכחתם לנעול את לוח המקשים, המערכת תנעל אותו אוטומטית ותתחיל לפעול כעבור 10 שניות.**

**4. שינוי זמן הפעולה במידת הצורך:**  
 ניתן לכוונן מחדש את שעות הפעילות במידת הצורך. לחצו על לחצן 4 עד שתשמעו צפצוף לפתיחת נעילת לוח המקשים והזמן המתוכננת הנוכחי יהבהב. חזרו על שלבים 2 עד 3.

**5. מצב המתנה/חיסכון בחשמל:**

- עם סיום המחזור, תצוגת הLED תהבהב 00. המערכת נמצאת כעת במצב המתנה. לאחר 5 דקות המערכת תעבור למצב חסכון בחשמל והתצוגה תראה " ". המערכת תפעיל את עצמה מחדש באופן אוטומטי תוך 24 שעות.
- בזמן שהמערכת במצב חסכון בחשמל, לחצו על מקש כלשהו והמערכת תציג לזמן קצר את הזמן שתוכנת ואז את ההודעה "00".

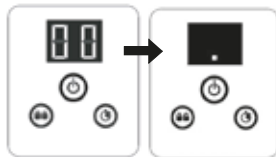

**לצפייה בשעות הגדרת קוצב הזמן (TIMER):**

בזמן שהמשאבה פועלת, לחצו על לחצן 4. התצוגה תהבהב לרגע את השעות שהוגדרו מראש למשך 10 שניות, ואז תציג שוב את שעות ההפעלה שנותרו.

**הפעלת משאבת החול ידנית (ללא מצב TIMER (קוצב זמן)):**

- להפעלת המשאבה בלבד ללא מצב קוצב זמן, לחצו על כפתור 1 כדי להפעיל את המשאבה, ואז לחצו על כפתור 2 עד שהתצוגה תראה FP. הודעה זו מציינת כי קוצב הזמן כבוי והמשאבה פועלת כעת ברציפות.
- כדי לעצור את המשאבה, לחצו על כפתור 2 בשנית.



## טבלת זמני הפעלת בריכה של אינטקס (ללא מערכת מים מלוחים של אינטקס)

טבלה זו מראה את זמני ההפעלה הדרושים לשימוש ממוצע במשאבת החול עם בריכות עיליות. אם המערכת מחוברת ליחידת "מים מלוחים של אינטקס", זמן הפעולה של משאבת המסנן צריך להיות ארוך בשעה מזמן ההפעלה הנדרש עבור מערכת מי המלח.

זמן הפעלת משאבת החול (למחזור אחד) / (שעות)	קיבולת מים (מחושבת ב 90%- לבריכת Easy Set (אובאלית) Frame Pool 80% - לבריכה		גודל הבריכה
	(ליטרים)	(גלונים)	
בריכות עיליות של אינטקס ( ASP )			
1	880	232	183 על 51 ס"מ
1	1942	513	244 על 61 ס"מ
2	2419	639	244 על 76 ס"מ
2	3077	813	305 על 61 ס"מ
2	3853	1018	305 על 76 ס"מ
3	5621	1485	366 על 76 ס"מ
4	7290	1926	396 על 84 ס"מ
5	9792	2587	457 על 84 ס"מ
6	12430	3284	457 על 107 ס"מ
7	14141	3736	457 על 122 ס"מ
1	1828	483	244 על 51 ס"מ
3	4485	1185	305 על 76 ס"מ
4	6503	1718	366 על 76 ס"מ
8	16805	4440	457 על 122 ס"מ
3	4485	1185	305 על 76 ס"מ
4	6503	1718	366 על 76 ס"מ
5	8592	2270	366 על 99 ס"מ
7	12706	3357	427 על 107 ס"מ
7	14614	3861	457 על 107 ס"מ
8	16805	4440	457 על 122 ס"מ
2	3539	935	300 X 175 X 80 ס"מ
4	6836	1806	400 X 200 X 100 ס"מ
4	8418	2224	400 X 200 X 122 ס"מ
6	10874	2873	488 X 244 X 107 ס"מ
1	1662	439	220 X 150 X 60 ס"מ
2	2282	603	260 X 160 X 65 ס"מ
2	3834	1013	300 X 200 X 75 ס"מ
4	7127	1883	450 X 220 X 84 ס"מ

הערה: הגדרת קוצב הזמן כוללת 10 דקות נוספות מעבר להגדרה בפועל.

## טבלת זמני הפעלת בריכה שאינה של אינטקס

טבלה זו מראה את זמני ההפעלה הדרושים לשימוש ממוצע במשאבת החול עם בריכות עיליות.

זמני הפעלה של משאבת החול (עבור מחזור אחד) (שעות)	קיבולת מים	
	(ליטרים)	(גלונים)
2	3785	1000
3	5678	1500
4	7570	2000
5	9463	2500
6	11355	3000
7	13248	3500
8	15140	4000
8	17033	4500

## טיפול בבריכה וכימיקלים

- כל הבריכות דורשות טיפול כדי שהמים יישארו נקיים והגיניים. עם בקרת כימיקלים נכונה המסנן שלכם יעזור להשיג מטרה זו. התייעצו עם משווק מורשה להנחיות בנוגע לשימוש הנכון בכלור, קוטל אצות וכימיקלים אחרים הדרושים לקבלת מים נקיים.
- הרחיקו את הכימיקלים לבריכה מהישג ידם של ילדים.
- אין להוסיף כימיקלים לבריכה בזמן שיש בתוכה מתרחצים. הדבר עלול לגרום לגירוי בעיניים או בעור.
- בדיקה על בסיס יומי של רמת ה-PH בבריכה וטיפול כימי במים הם פעולות חשובות מאוד.
- כלור, קוטל אצות ותחזוקת רמת PH נכונה נדרשים בזמן מילוי בריכה כמו גם לאורך עונת הרחצה. יש להיוועץ עם משווק בריכות מקומי לקבלת הנחיות.
- מילוי הבריכה הראשון בעונה עשוי ליצור מים מליחים להם נדרשים יותר תוספים למים וזמן סינון ארוך יותר. אין לבלוע מי בריכה לפני איזון רמת ה-PH. היוועצו בספק ציוד בריכות השחייה המקומי להנחיות.
- מים עם כלור עלולים לפגוע במדשאות, גינות או בשיחים כשילדים המשחקים בבריכה מתיזים מים אל מחוצה לה. מדשאות מתחת לבטנת הבריכה יהרסו. שימו לב כי סוגים מסוימים של דשא עשויים לצמוח דרך הבטנה.
- זמן הפעלת המסנן תלוי בגודל הבריכה, במזג האוויר וברמת השימוש בבריכה. ערכו ניסיונות עם זמני הפעלה שונים עד להשגת מים נקיים וצלולים.
- תקן אירופאי EN16713-3 מציין מידע נוסף בנוגע לאיכות מים וטיפול במים, אותו ניתן למצא באתר [www.intexcorp.com/support](http://www.intexcorp.com/support)



### זהירות

**תמיסת כלור מרוכזת עלולה לפגוע בבטנת הבריכה. יש לפעול בהתאם להנחיות**

### אחסון לטווח ארוך ולתקופת החורף



### זהירות

1. לפני ריקון הבריכה לפני אחסון לטווח ארוך או העברת הבריכה למיקום אחר, יש לוודא שהמים מכוונים לעבר כלי ניקוז מים מתאים הרחק מביתכם. בדקו את התקנות המקומיות בנוגע לכיוונים ספציפיים הנוגעים לריקון מי בריכה.
2. כבו את היחידה, נתקו את כבל החשמל משקע החשמל.
3. כשהבריכה ריקה, נתקו את כל הצינורות מהמשאבה והוציאו את המסננים מדופן הבריכה.
4. פתחו את הברגת כיסוי שסתום הניקוז (9) בתנועה נגד כיוון השעון והסירו אותו משסתום הניקוז כדי לרוקן ביסודיות את המכל. שסתום הריקון נמצא בתחתית מכל המסנן.
5. פרקו את מנוע המשאבה מבסיס המכל.
6. השאירו את חלקי משאבת המסנן ואת הצינורות בחוץ לייבוש יסודי.
7. **צפו את טבעות ה-O הבאות בגרזי לפני אחסון לטווח ארוך:**
  - טבעת O של הצינור (6).
  - טבעת O של שסתום שחרור אוויר (15).
8. לחצו על ידית הבורר 4 מצבים וסובבו כדי להעבירו את המצביע על מיקום N העליון.
9. כך המים יוכלו להתרוקן מהבורר. השאירו את הבורר 4 מצבים במיקום לא פעיל זה. מומלץ להכניס את כל החלקים היבשים ואת מנוע המשאבה לאריזה המקורית לצורך אחסון. למניעת התעבות או בעיות קורוזיה, אין לכסות את מנוע המשאבה בשקיות פלסטיק.
10. אחסנו את מנוע המשאבה והאביזרים הנלווים במקום יבש. יש לוודא שהממפרטורה במקום האחסון נשארת בטווח שבין 0 מעלות צלזיוס לבין 40 מעלות.
11. כסו את המכל בברזנט או בניילון כדי להגן עליו מפגעי מזג האוויר.

## פתרון בעיות

בעיה	גורם	פתרון
מנוע המסנן לא נדלק	<ul style="list-style-type: none"> <li>המנוע לא מחובר לחשמל.</li> <li>ממסר הפחת קפץ.</li> <li>המנוע חם מדי ומנגנון הגנת עומס יתר כבוי.</li> </ul>	<ul style="list-style-type: none"> <li>כבל החשמל צריך להיות מחובר לשקע עם 3 גידים המוגן על ידי ממסר פחת.</li> <li>יש לאפס את ממסר הפחת. אם המפסק קופץ בפתאומיות, ייתכן שיש תקלה במערכת החשמל. הורידו את המפסק וקראו לחשמלאי לתיקון הבעיה.</li> <li>אפשר למנוע להתקרר ואתחלו שוב את המעגל החשמלי.</li> </ul>
המסנן לא מנקה את הבריכה	<ul style="list-style-type: none"> <li>רמות כלור או pH לא נכונות.</li> <li>אין חומר סינון במכל.</li> <li>מיקום לא נכון של הבורר 4 מצבים.</li> <li>בריכה מלוכלכת מדי.</li> <li>המסנן מגביל את זרימת המים.</li> </ul>	<ul style="list-style-type: none"> <li>כוונו את רמות הכלור וה-pH. יש להיוועץ עם משווק בריכות מקומי.</li> <li>הכניסו חול סינון, פנו לסעיף "הנחיות לטעינת חול".</li> <li>העבירו את הבורר למצב FILTER (מסנן).</li> <li>הפעילו את המסנן זמן ארוך יותר.</li> <li>נקו את המסנן בכניסת המים.</li> </ul>
המסנן לא שואב מים או שהזרימה חלשה מאוד	<ul style="list-style-type: none"> <li>אוויר לכוד במערכת.</li> <li>כניסה או יציאה סתומות.</li> <li>דליפת אוויר מקו שאיבת המים.</li> <li>בריכה מלוכלכת מדי.</li> <li>חול הסינון סתום מלכלוך.</li> <li>חיבור הפיה והמסנן הפוכים.</li> <li>התקשות או התגבשות של פני שטח חול הסינון.</li> <li>מכשיר שאיבת מי בריכה מחובר למערכת.</li> <li>מחבר כניסת אוויר בכניסת המים מחובר לחור הלא נכון בבטנה.</li> </ul>	<ul style="list-style-type: none"> <li>שחררו את האוויר, פנו אל הוראות ההפעלה.</li> <li>נקו מכשולים הקיימים בצינור כניסת המים על ידי פריקתו בתוך דופן הבריכה.</li> <li><b>חזקו את תפסי הצינור, בדקו שהצינורות לא פגומים, ובדקו את גובה המים.</b></li> <li>בצעו שטיפה לאחור של המסנן.</li> <li>התקינו את הפיה במיקום העליון של כניסת המים לבריכה, ואת המסנן במיקום התחתון של יציאת המים מהבריכה.</li> <li>הוציאו כ-2.5 ס"מ של חול במידת הצורך.</li> <li>הוציאו התקני שאיבה מהבריכה המחברים לקו המים של המערכת.</li> <li>ודאו שמחבר האוויר בכניסת המים מחובר אל פתח כניסת המים העליון בבריכה.</li> </ul>
המשאבה לא עובדת	<ul style="list-style-type: none"> <li>גובה המים נמוך מדי.</li> <li>רשת המסנן סתומה.</li> <li>דליפת אוויר בצינור שאיבת המים.</li> <li>מנוע תקול או שהאימפולר תקוע.</li> </ul>	<ul style="list-style-type: none"> <li>מלאו את הבריכה עד לגובה המים הנכון.</li> <li>נקו את רשתות הסינון בכניסת המים לבריכה.</li> <li><b>חזקו את תפסי הצינור, בדקו שהצינור לא פגום.</b></li> <li>צרו קשר עם מרכז שירות של אינטקס.</li> </ul>
<b>בורר 4 מצבים</b> מצבים/כיסוי דולף	<ul style="list-style-type: none"> <li>טבעת O של מכל החול חסרה.</li> <li>טבעת O של מכל החול מלוכלכת.</li> <li>תפס אוגן לא הדוק.</li> <li><b>בורר 4 מצבים מצבים תקול.</b></li> </ul>	<ul style="list-style-type: none"> <li>הוציאו את כיסוי הבורר 4 מצבים כדי להבטיח שטבעת ה-O נמצאת במקומה.</li> <li>נקו את טבעת O של מכל החול באמצעות צינור גינה.</li> <li>סגרו היטב.</li> <li>צרו קשר עם מרכז שירות של אינטקס.</li> </ul>
צינור דולף	<ul style="list-style-type: none"> <li><b>תפס צינור לא מחובר היטב.</b></li> <li><b>טבעת O של צינור יצאה ממקומה בזמן חיבור הצינור.</b></li> <li><b>צינור קרוע.</b></li> </ul>	<ul style="list-style-type: none"> <li><b>סגרו או התקינו מחדש את תפסי הצינור.</b></li> <li><b>החזירו את טבעת ה-O לחרוץ שלה.</b></li> <li><b>החליפו לצינור חדש.</b></li> </ul>
קוצב הזמן לא מדויק או שלא ניתן להגדיר את הזמן	<ul style="list-style-type: none"> <li>ייתכן שקוצב הזמן הפנימי תקול.</li> </ul>	<ul style="list-style-type: none"> <li>סגרו את המשאבה והמתינו חמש דקות לפני שתפעילו אותה מחדש.</li> <li>אתחלו את קוצב הזמן.</li> <li>צרו קשר עם מרכז שירות של אינטקס.</li> </ul>
מד לחץ לא פועל	<ul style="list-style-type: none"> <li>כניסת מד לחץ סתומה.</li> <li>מד לחץ תקול.</li> </ul>	<ul style="list-style-type: none"> <li>נקו חסימות מצינור כניסת המים על ידי פתיחת ההברגה מהבורר 4 מצבים.</li> <li>צרו קשר עם מרכז שירות של אינטקס.</li> </ul>
החול זורם בחזרה לבריכה	<ul style="list-style-type: none"> <li>החול קטן מדי.</li> <li>מצע החול עבר הסתיידות.</li> </ul>	<ul style="list-style-type: none"> <li>יש להשתמש בחול סיליקה מס' 20 עם חלקיקים בגודל של 0.45 עד 0.85 מ"מ ומקדם אחידות קטן מ-1.75.</li> <li>החליפו חול.</li> </ul>
דליפת שסתום סילון אוויר	<ul style="list-style-type: none"> <li><b>שסתום סילון אוויר לא מחוזק ופונה כלפי מעלה.</b></li> <li><b>אטם פנימי של שסתום סילון אוויר חסום.</b></li> <li><b>אטם פנימי של שסתום סילון אוויר מלוכלך.</b></li> <li><b>שסתום סילון אוויר תקול.</b></li> </ul>	<ul style="list-style-type: none"> <li><b>חזקו את שסתום סילון האוויר וודאו שהוא פונה כלפי מעלה.</b></li> <li><b>הפעילו את המשאבה למשך מספר שניות, ואז כבו אותה. חזרו על התהליך שלוש פעמים.</b></li> <li><b>הסירו את שסתום סילון האוויר, שטפו ממנו לכלוך במים והחזירו אותו למקומו.</b></li> <li><b>החליפו לסילון אוויר חדש.</b></li> </ul>
דליפה קטנה משסתום סילון אוויר כשהמשאבה פועלת	<ul style="list-style-type: none"> <li><b>אביזרים נלווים מחוברים לקו הזרמת המים.</b></li> </ul>	<ul style="list-style-type: none"> <li><b>הוציאו את כל האביזרים הנלווים (כגון כיסוי סולרי, מנקה בריכות אוטומטי, תאורת לד) מקו סירקולציית המים וחברו את כיסוי שסתום סילון אוויר (26) על שסתום סילון האוויר (25). אל תכסו את שסתום סילון האוויר (25) בכיסוי השסתום (26) בתנאי הפעלה רגילים או כשהמשאבה פועלת.</b></li> </ul>

## בעיות נפוצות בבריכות

בעיה	תיאור	סיבה	פתרון
אצות	<ul style="list-style-type: none"> <li>מים ירקרקים.</li> <li>כתמים ירוקים או שחורים על דופן הבריכה.</li> <li>דופן הבריכה חלקלקה או מדיפה ריח רע.</li> </ul>	<ul style="list-style-type: none"> <li>יש לכוון את רמות הכלור וה-pH.</li> </ul>	<ul style="list-style-type: none"> <li>יש לבצע הכלרת על עם טיפול בהלם.</li> <li>יש לתקן את רמות ה-pH בבריכה בהתאם להמלצות שניתנו בחנות.</li> <li>יש לשאוב את קרקעית הבריכה.</li> <li>יש לשמור על רמות כלור מתאימות.</li> </ul>
מים בצבעים	<ul style="list-style-type: none"> <li>המים הופכים לכחולים, חומים או שחורים בזמן הטיפול הראשוני בכלור.</li> </ul>	<ul style="list-style-type: none"> <li>נחושת, ברזל או מגנזיום במים מתחמצנים בשל הוספת הכלור.</li> </ul>	<ul style="list-style-type: none"> <li>כוונו את רמת ה-pH לרמה המומלצת.</li> <li>יש להפעיל את המסנן עד שהמים צלולים.</li> </ul>
לכלוך צף במים	<ul style="list-style-type: none"> <li>המים מעורפלים או חלביים.</li> </ul>	<ul style="list-style-type: none"> <li>"מים קשים" עקב רמות pH גבוהות מדי.</li> <li>תכולת הכלור נמוכה מדי.</li> <li>חומר זר במים.</li> </ul>	<ul style="list-style-type: none"> <li>יש לתקן את רמות ה-pH. יש להתייעץ עם המקום שבו רכשתם את הבריכה.</li> <li>כוונו את רמות הכלור.</li> </ul>
גובה מים נמוך באופן קבוע	<ul style="list-style-type: none"> <li>גובה המים נמוך יותר מזה שהיה ביום הקודם.</li> </ul>	<ul style="list-style-type: none"> <li>קרע או חור בדופן הבריכה או בצינורות.</li> <li>שסתומי הניקוז משוחררים.</li> </ul>	<ul style="list-style-type: none"> <li>יש לתקן בעזרת ערכת תיקון קרעים.</li> <li>יש לחזק ביד את כל המכסים.</li> </ul>
משקעים על קרקעית הבריכה	<ul style="list-style-type: none"> <li>לכלוך או חול על קרקעית הבריכה.</li> </ul>	<ul style="list-style-type: none"> <li>שימוש רב בבריכה, יציאות וכניסות רבות מהבריכה.</li> </ul>	<ul style="list-style-type: none"> <li>יש להשתמש בשואב בריכות של אינטקס לניקוי הבריכה.</li> </ul>
לכלוך על פני שטח המים	<ul style="list-style-type: none"> <li>עלים, חרקים וכולי.</li> </ul>	<ul style="list-style-type: none"> <li>הבריכה קרובה מדי לעצים.</li> </ul>	<ul style="list-style-type: none"> <li>יש להשתמש ברשת ניקוי בריכות של אינטקס.</li> </ul>

## בטיחות כללית במים

בילוי במים מהנה ומרפא. אולם, יש בו סכנות מובנות הכוללות פציעה ומוות. להפחתת סכנת הפציעה, יש לקרוא את כל האזהרות וההוראות שעל המוצר, האריזה והחוברות שבאריזה ולפעול לפיהן. אולם, זכרו כי האזהרות וההנחיות של המוצר נוגעים לחלק מהסיכונים הנפוצים של בילוי במים, אך אינם מכסים את כל הסיכונים והסכנות.

**לאמצעי בטיחות נוספים, יש להכיר את הקווים המנחים הבאים, כמו גם את הקווים המנחים של ארגוני בטיחות ארציים מוכרים:**

- יש להקפיד על פיקוח מתמיד. מבוגר אחראי ובעל יכולת צריך להיות ממונה כ"מציל" או הצופה במים, בעיקר כשילדים נמצאים בתוך וסביב הבריכה.
- יש ללמוד לשחות.
- יש להקדיש זמן ללמוד החיאה ועזרה ראשונה.
- יש להנחות כל אדם המפקח על המשתמשים בבריכה בנוגע לסכנות הפוטנציאליות של שימוש בבריכה ובנוגע לשימוש באמצעי הגנה כגון נעילת דלתות, מחסומים וכולי.
- יש להנחות את כל המשתמשים בבריכה, כולל ילדים, מה יש לעשות במקרה חירום.
- יש להפעיל את השכל הישר ושיקול דעת בזמן פעילות במים.
- פיקוח, פיקוח, פיקוח.

## אחריות מוגבלת

משאבת החול יוצרה בעזרת החומרים והעבודה מהאיכות הגבוהה ביותר. כל מוצרי אינטקס נבדקים ויוצאים ללא כשלים מהמפעל. אחריות מוגבלת זו תקפה רק עבור משאבת החול והאביזרים הנלווים המצוינים להלן.

אחריות מוגבלת זו היא בנוסף, ואינה תחליף, לזכויות ולסעדים שנקבעו לך בחוק. אם אחריות זו אינה תואמת אחת מזכויותיך החוקיות, זכויות משפטיות אלו מקבלות קדימות. למשל, חוקים צרכניים באיחוד האירופי מספקים זכויות אחריות חוקיות בנוסף לכיסוי שאתה מקבל מאחריות מוגבלת זו: למידע על חוקי צרכנים ברחבי האיחוד האירופי, היכנס לאתר האינטרנט של מרכז הצרכנים האירופי בכתובת: [http://ec.europa.eu/consumers/ecc/contact\\_en/htm](http://ec.europa.eu/consumers/ecc/contact_en/htm).

הוראות אחריות מוגבלת זו תקפות רק לגבי הרוכש המקורי ואינן ניתנת להעברה. אחריות מוגבלת זו תקפה לתקופה המצוינת להלן מיום הרכישה הראשונית של המוצר. יש לשמור חשבונית רכישה מקורית עם מסמך זה כהוכחה רכישה, ויש להציגה עם תביעות במסגרת האחריות.

אחריות על משאבת המסנן - שנה  
**אחריות צינורות ואביזרים - 180 יום**

אם מצאת כשלים בייצור משאבת החול במהלך תקופת האחריות המצוינת לעיל, יש ליצור קשר עם מרכז שירות מתאים של אינטקס המצוין בגיליון "מרכזי שירות מורשים". אם הפריט מוחזר בהוראת מרכז שירות של אינטקס, מרכז השירות יבדוק את הפריט ויקבע את תקפות התביעה. אם הפריט מכוסה באחריות, הוא יתוקן או יוחלף בפריט זהה או בר השוואה (לפי בחירת אינטקס), ללא עלות נוספת מצידכם.

מלבד אחריות זו וזכויות משפטיות אחרות במדינתך, לא יהיו תקפות התחייבויות נוספות כלשהן. במידת הניתן במדינה שלך, בשום מקרה לא תהיה אינטקס אחראית כלפיך או כלפי צד שלישי עבור נזק ישיר או תוצאתי הנובע מהשימוש במשאבת החול, או מהפעולות של אינטקס או סוכניה או עובדיה (כולל הייצור של המוצר). במוצר. אם המדינה שלך לא מאפשרת החרגה או הגבלה של נזק מקרי או תוצאתי, מגבלה או החרגה זו אינן חלות עליך.

שים לב כי אחריות מוגבלת זו אינה תקפה במקרים הבאים:

- אם משאבת החול עוברת הזנחה, שימוש חריג או יישום חריג, תאונה, הפעלה לא נכונה, שימוש במקור מתח לא מתאים או בזרם בניגוד להוראות השימוש, תחזוקה או אחסון לא נכונים.
- אם נגרם למשאבת החול נזק עקב נסיבות שאינן בשליטתה של אינטקס, כולל בלאי רגיל ונזקים שנגרמים עקב חשיפה לדליקה, שיטפון, קיפאון, גשם או כוחות טבע אחרים, אך מבלי להגביל לאלו.
- לחלקים ורכיבים שאינם נמכרים על ידי אינטקס. או,
- לשינויים, תיקונים או פירוק לא מורשים של משאבת החול על ידי אדם שאינו חלק ממרכז שירות מוסמך של אינטקס.

אחריות זו אינה מכסה עלויות שייגרמו עקב אבדן מי בריכה, כימיקלים או נזקי מים. אחריות זו אינה מכסה פציעות או נזקים לרכוש או אנשים.

יש לקרוא את הוראות השימוש בקפידה ולפעול בהתאם לכל ההנחיות הנוגעות להפעלה נכונה ותחזוקה של משאבת החול. יש לבדוק את המוצר לפני כל שימוש בו. אחריות מוגבלת זו תבוטל במקרה של הפעלה שלא בהתאם להנחיות השימוש.

## IMPORTANT SAFETY RULES

Please read, understand, and follow all instructions carefully before installing and using this product. Keep for future reference.

# SX 925

Krystal Clear™ Sand Filter Pump  
Certified Model Number SF40220  
220 - 240 V~, 50 Hz, 90 W  
Hmax 3.0 m, Hmin 0.19 m, IPX4  
Max. Water Temperature 35 °C



For illustrative purposes only.

Don't forget to try these other fine Intex products: pools, pool accessories, inflatable pools and in-home toys, airbeds and boats available at fine retailers or visit our website.

Due to a policy of continuous product improvement, Intex reserves the right to change specifications and appearance, which may result in updates to the instruction manual without notice.

# INTEX®

©2021 Intex Marketing Ltd. - Intex Development Co. Ltd. - Intex Recreation Corp.  
All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/ Gedruckt in China.

®™ Trademarks used in some countries of the world under license from/®™ Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/Intex Marketing Ltd. to/à/a/an Intex Development Co. Ltd., Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/Distribué dans l'Union Européenne par/Distribuido en la unión Europea por/Vertrieb in der Europäischen Union durch/Intex Trading B.V., Venneveld 9, 4705 RR Roosendaal – The Netherlands  
[www.intexcorp.com](http://www.intexcorp.com)

## TABLE OF CONTENTS

<b>Warnings.....</b>	<b>3</b>
<b>Parts References.....</b>	<b>4-5</b>
<b>Setup Instructions.....</b>	<b>6-10</b>
<b>Product Specifications.....</b>	<b>6</b>
<b>Operating Instructions.....</b>	<b>11-13</b>
<b>Intex Pools Operating Time Table.....</b>	<b>14</b>
<b>Non-Intex Pools Operating Time Table.....</b>	<b>15</b>
<b>Maintenance.....</b>	<b>16</b>
<b>Long Term Storage.....</b>	<b>16</b>
<b>Troubleshooting Guide.....</b>	<b>17</b>
<b>Common Pool Problems.....</b>	<b>18</b>
<b>General Aquatic Safety.....</b>	<b>18</b>
<b>Limited Warranty.....</b>	<b>19</b>

## IMPORTANT SAFETY RULES

Read, Understand and Follow All Instructions Carefully Before Installing and Using this Product.

### READ AND FOLLOW ALL INSTRUCTIONS

#### WARNING



- Always supervise children and those with disabilities.
- Children must stay away from this product and electrical cord(s).
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Assembly and disassembly by adults only.
- Risk of electric shock. Connect this product only to a grounding type receptacle protected by a ground-fault circuit interrupter (GFCI) or residual current device (RCD). Contact a qualified electrician if you cannot verify that the receptacle is protected by a GFCI/RCD. Use a qualified electrician to install the GFCI/RCD, which has a maximum rate of 30mA. Do not use a portable residual current device (PRCD).
- Always unplug this product from the electrical outlet before removing, cleaning, servicing or making any adjustment to the product.
- The plug must be accessible after product is installed.
- Do not bury the electrical cord. Locate the cord where it will not be damaged by lawn mowers, hedge trimmers and other equipment.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- To reduce the risk of electric shock, do not use extension cords, timers, plug adaptors or converter plugs to connect unit to electric supply; provide a properly located outlet.
- Do not attempt to plug in or unplug this product while standing in water or when your hands are wet.
- Keep this product more than 2m away from the pool.
- Keep this product more than 3.5m away from the pool (for France only).
- Keep the plug of this product more than 3.5m away from the pool.
- Position this product away from the pool, so as to prevent children from climbing on it and accessing the pool.
- Do not operate this product when pool is occupied.
- This product is for use with storable pools only. Do not use with permanently installed pools. A storable pool is constructed so that it may be readily disassembled for storage and reassembled to its original configuration.
- To reduce the risk of entrapment hazard, never enter the pool if suction strainer component is loose, broken, cracked, damaged or missing. Replace loose, broken, damaged, cracked or missing suction strainer components immediately.
- Never play or swim near suction fittings. Your body or hair may be trapped causing permanent injury or drowning.
- To prevent equipment damage and risk of injury, always turn pump off before changing the filter control valve position.
- Never operate this product above the maximum working pressure stated on the filter tank.
- Hazardous Pressure. Improper tank valve cover assembly could cause the valve cover to blow off and cause serious injury, property damage or death.
- This product is intended to be used only for the purposes described in the manual!

**FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN PROPERTY DAMAGE, ELECTRIC SHOCK, ENTANGLEMENT OR OTHER SERIOUS INJURY OR DEATH.**

These product warnings, instructions and safety rules provided with the product represent some common risks of water recreation devices and do not cover all instances of risk and danger. Please use common sense and good judgement when enjoying any water activity.

## PARTS REFERENCE

Before assembling your product, please take a few minutes to check the contents and become familiar with all the parts.

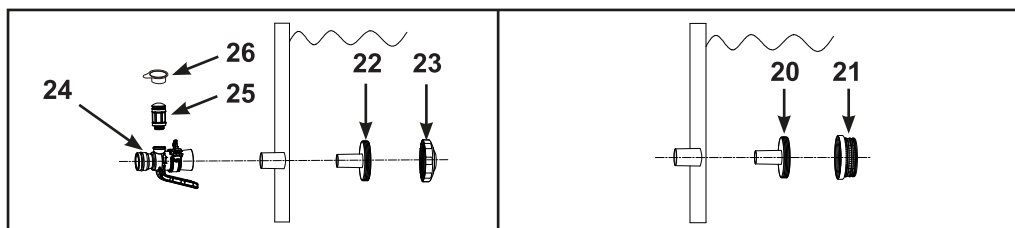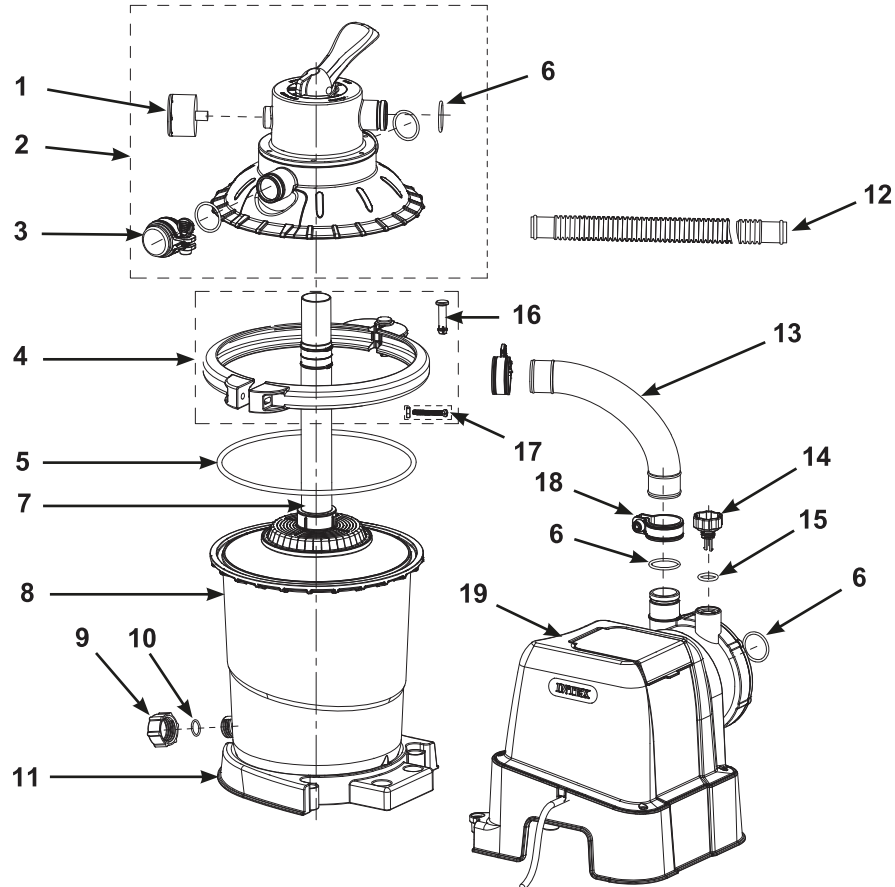

**NOTE:** Drawings for illustration purpose only. Actual product may vary. Not to scale.

## PARTS REFERENCE (continued)

Before assembling your product, please take a few minutes to check the contents and become familiar with all the parts.

REF. NO.	DESCRIPTION	QTY.	SPARE PART NO.
1	PRESSURE GAUGE	1	13078
2	TANK COVER & 4-WAY VALVE SET	1	13079
3	DRAIN OUTLET COVER	1	13080
4	CLAMP ASSEMBLY	1	13081
5	TANK O-RING	1	13083
6	HOSE O-RING	5	12947
7	CENTER PIPE WITH FILTER GRID	1	13084
8	SAND FILTER PUMP TANK	1	13082
9	DRAIN VALVE CAP	1	11456
10	DRAIN VALVE O-RING	1	11385
11	SAND FILTER PUMP TANK BASE	1	13085
12	HOSE	2	10399
13	SAND FILTER INTERCONNECTING HOSE	1	13086
14	AIR RELEASE VALVE	1	10725
15	AIR RELEASE VALVE O-RING	1	10264
16	CLAMP PIN	1	11726
17	CLAMP SCREW	1	11727
18	HOSE CLAMP	6	11489
19	PUMP MOTOR	1	13090
20	STRAINER CONNECTOR	1	11070
21	STRAINER GRID	1	12197
22	INLET STRAINER CONNECTOR	1	12365
23	POOL INLET JET NOZZLE	1	12364
24	POOL INLET AIR ADAPTOR	1	12368
25	AIR JET VALVE	1	12363
26	AIR JET VALVE CAP	1	12373

When ordering parts, be sure to quote the model number and part numbers.

## PRODUCT SPECIFICATIONS

The sand filter removes suspended particles but does not sanitize your pool. Pool chemistry is a specialized area and you should consult your local pool service specialist for details.

Power:	220-240 Volt AC
Wattage:	90 W
Maximum working pressure:	1.0 bar (15 psi)
Effective filtering area:	0.03 m <sup>2</sup> (0.35 ft <sup>2</sup> )
Pump flow rate (at pump outlet):	3.5 m <sup>3</sup> /h (925 GPH)
Recommended filtering media: (Not included)	No. 20 silica sand or glass sand. Particle size range 0.45 to 0.85 mm (0.018 to 0.033 inches). Uniformity Coefficient less than 1.75.
Recommended filtering media quantity:	No. 20 silica sand 6.5 Kg (14.5 Lbs) or glass sand 5.0 Kg (11 Lbs).
Limited Warranty:	see "Limited Warranty"

## SETUP INSTRUCTIONS

**TOOLS REQUIRED:** One (1) Phillips screwdriver

**Pump location and mounting:**




- The system must be installed on a solid level and vibration-free base.
- Provide a location protected from the weather, moisture, flooding and freezing temperature.
- Provide adequate access, space and lighting for routine maintenance.
- Pump motor requires free circulation of air for cooling. Do not install the pump in a damp or non-ventilated location.

A team of 2 or more people is recommended for setting up this product.

The appliance is intended only for household use.

**Sand tank installation:**

1. Place the tank support base at the selected location.
2. Place the tank on the tank support base (**see drawing 1**).
3. Vertically insert the center pipe into the filter grid (**see drawing 2.1**).
4. Vertically insert the filter grid and center pipe assembly into the tank. Ensure filter grid assembly is securely fitted to the bottom of the tank, and the center pipe is vertically centered inside the tank (**see drawing 2.2**).

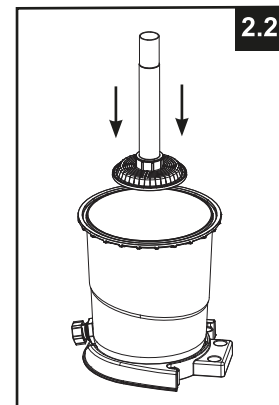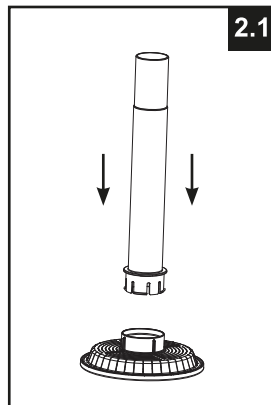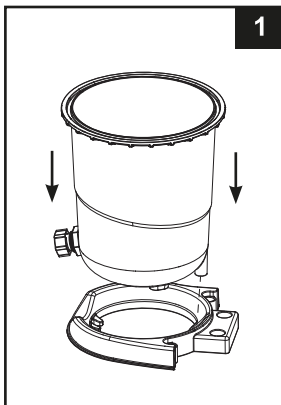

## SETUP INSTRUCTIONS (continued)


### Sand loading:

**IMPORTANT:** Use No. 20 silica sand or glass sand with particle size range 0.45 to 0.85 mm (0.018 to 0.033 inches) and a Uniformity Coefficient less than 1.75.

Only use the filter media specified by the manufacturer.

**NOTE:** Before loading the tank with sand, ensure the sand filter grid and center pipe assembly is securely in place on the tank bottom, and the center pipe (7) is vertically centered inside the tank.

1. To prevent sand from falling into the center pipe top opening when pouring the sand, cover the center pipe top opening with a cup or similar object (see drawing 3).
2. With one person holding the center pipe to keep it centered, pour the sand into the tank at a slow rate manually to prevent the filter grid assembly from shifting (see drawing 4).

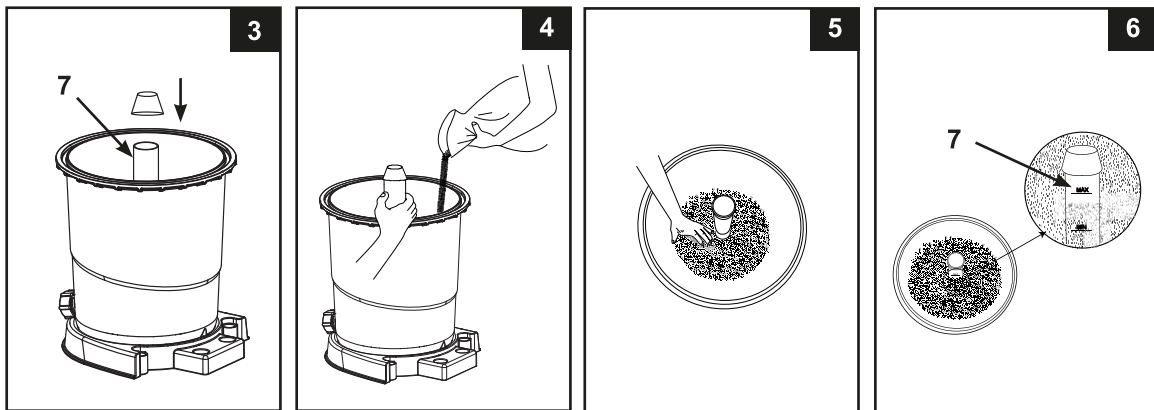

3. Fill the tank approximately half way first to evenly distribute the sand inside the tank, then fill the tank with some water to provide a cushioning effect when the remaining sand is poured in. This prevents the filter grid from excessive shock (see drawing 5).
4. Sand shall be filled between the "MAX" and "MIN" marked gauge on the center pipe. Evenly spread and level out the sand by hand (see drawings 5 & 6).
5. Remove the protective cup from the center pipe top opening.
6. Wash away all sand around the top edge of the tank.

**IMPORTANT:** Ensure the center pipe (7) remains centered after sand loading is completed before proceeding to the next step.



## SETUP INSTRUCTIONS (continued)

### ⚠ WARNING

Improper tank valve and clamp assembly could cause the valve and clamp to blow off and cause serious injury, property damage or death.



#### 4-way valve installation:

1. Make sure the tank o-ring (5) is in place (see drawing 7). **NOTE:** Ensure the tank o-ring is free of sand or debris.
2. Lower the 4-way valve cover over the tank slowly, and ensure the bypass pipe protruding underneath the 4-way valve cover fits securely into the center pipe (7) top opening (see drawing 8). Make sure the tank o-ring is securely fitted between the top edge of the tank groove and the 4-way valve cover edge. **IMPORTANT:** Ensure the 4-way valve cover ridge is aligned with the groove on the tank rim.

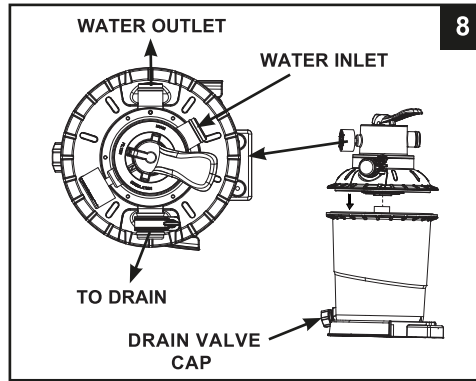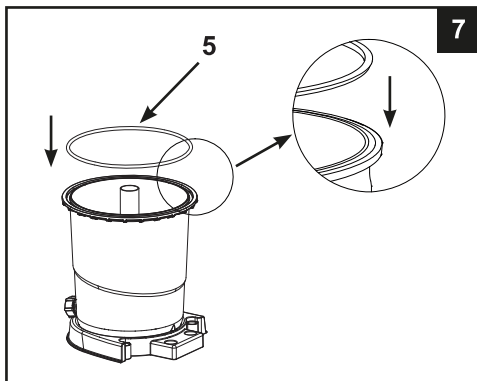

**IMPORTANT:** There are three hose connection ports on the 4-way valve, ensure the outlet connection (from filter to the pool) on the valve is facing towards the pool (see drawing 9).





3. Remove the screw, and install the clamp around the tank and 4-way valve flanges, then replace the screw and use a phillips screwdriver (not included) to tighten it (see drawings 9 & 10).

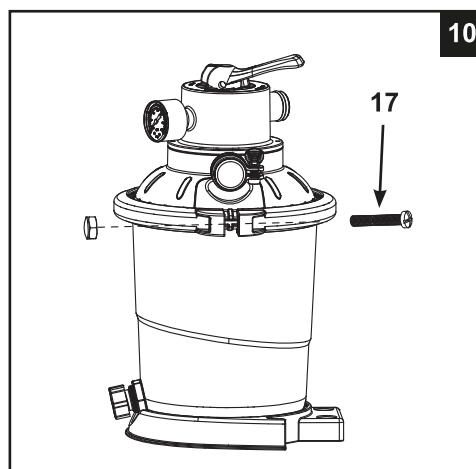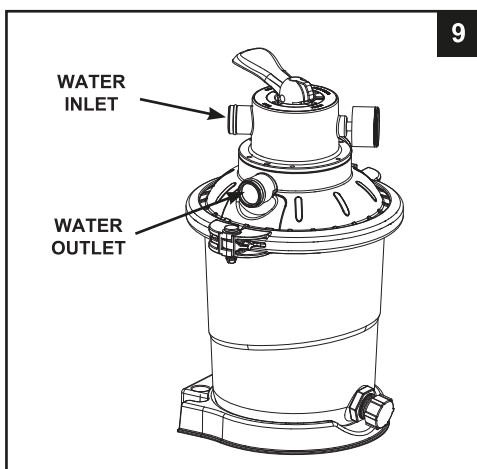

## SETUP INSTRUCTIONS (continued)

### Motor installation:

1. Make sure a hose o-ring (6) is on the pump motor outlet. Connect the sand filter interconnecting hose (13) to the pump motor outlet with a hose clamp (see drawing 11).
2. Connect the pump motor unit to the tank support base (see drawing 12.1).  
**IMPORTANT: Some countries, especially in the European community, require the product to be secured to the ground or to a base in a permanent upright position. Check your local authorities to determine if there is a regulation in your area regarding above-the-ground swimming pool filter-pumps. If yes, then the product can be mounted to a platform using the two holes located in the base. See drawing 12.2. The product can be mounted on a cement base or onto a wooden platform to prevent accidental falling over.**
  - The mounting holes are 6.4 mm in diameter and spaced 163 mm apart.
  - Use two bolts and lock nuts with a maximum of 6.4 mm in diameter.
3. Make sure a hose o-ring (6) is on the 4-way valve inlet connection. Connect the sand filter interconnecting hose (13) to the 4-way valve inlet connection with a hose clamp (see drawing 13).

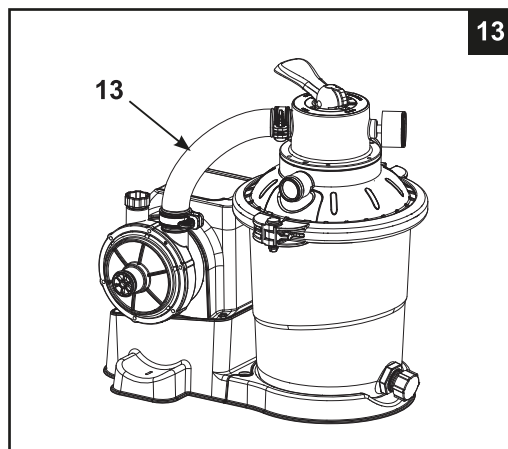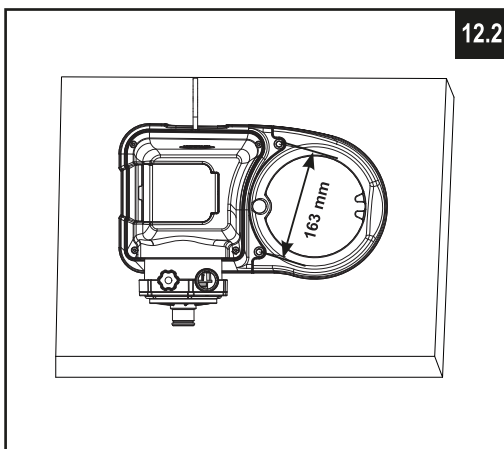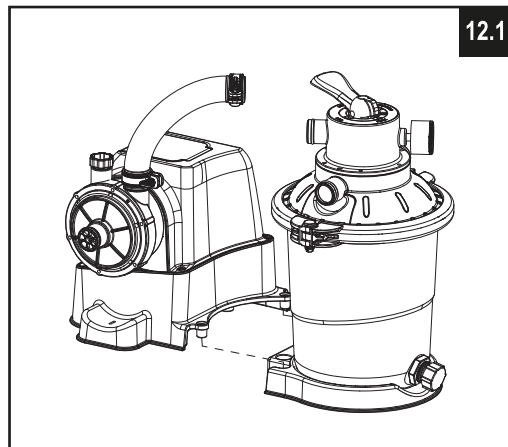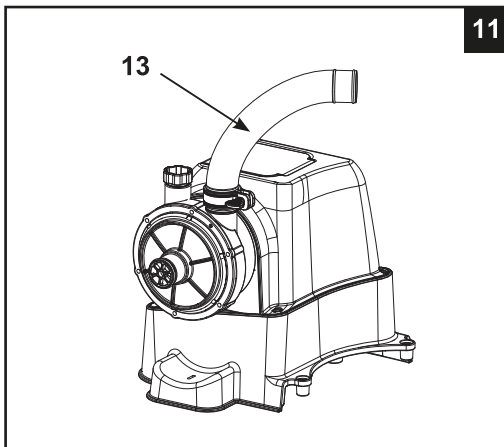


## SAND FILTER PUMP HOSE CONNECTION SETUP

### ⚠ WARNING

- Keep this product more than 2 m away from the pool.
- Keep this product more than 3.5 m away from the pool (for France only).
- Keep the plug of this product more than 3.5 m away from the pool.
- Position this product away from the pool, so as to prevent children from climbing on it and accessing the pool.

The 4-way valve has three hose connection ports.

1. Connect one hose (12) end to the pump motor inlet and the other end of the hose to the lower connector with the strainer. Ensure the hoses are securely tightened.
2. Connect the second hose (12) between the 4-way valve water outlet and the upper connector with the inlet-nozzle. Ensure the hoses are securely tighten.
3. The third hose connection port (drain/waste outlet) on the 4-way valve shall be directed to a proper draining receptacle using a hose or pipe (not provided). Make sure the drain outlet cover is removed before attaching the drain/waste hose or pipe.
4. The sand filter pump is now ready to filter the pool.

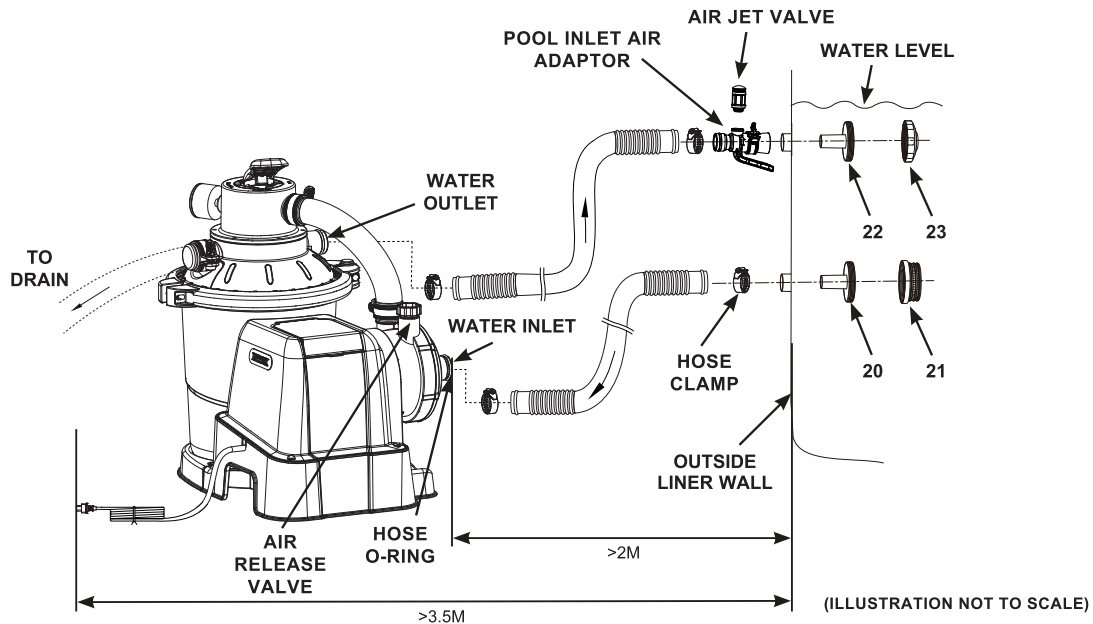

According to the International Standard, IEC 60364-7-702, on electrical installation of swimming pools and other basins equipment, the following installation distances must be respected:

- The filter pump must be positioned more than 2 m away from the pool walls.
- The power cord plug to the 220-240 volt electrical power source of the filter pump must be positioned more than 3.5 m away from the pool walls.

Check your local authorities to determine the appropriate standard and requirements for "electrical installation of swimming pools and basins equipment". The following table is for reference only:

Country/Region	Standard Number
International	IEC 60364-7-702
France	NF C 15-100-7-702
Germany	DIN VDE 0100-702
The Netherlands	NEN 1010-702





## OPERATING INSTRUCTIONS

### ⚠ WARNING

- Risk of electric shock. Connect this product only to a grounding type receptacle protected by a ground-fault circuit interrupter (GFCI) or residual current device (RCD). Contact a qualified electrician if you cannot verify that the receptacle is protected by a GFCI/RCD. Use a qualified electrician to install the GFCI/RCD, which has a maximum rate of 30mA. Do not use a portable residual current device (PRCD).
- To reduce the risk of electric shock, do not use extension cords, timers, plug adaptors or converter plugs to connect unit to electric supply; provide a properly located outlet.
- Do not attempt to plug in or unplug this product while standing in water or when your hands are wet.
- Never operate this product above the maximum working pressure stated on the filter tank.
- Always switch off pump before changing the 4-way valve position.
- Operating this product without water flowing through the system can cause a build up of hazardous pressure which can result in an explosive situation, serious injury, property damage or death.
- Never test this pump with compressed air. Never operate the system with water temperature above 35°C (95°F).

#### 4-way valve positions and function:

Valve Position	Function	Water Flow Direction
<b>FILTER</b> (see drawing 14)	Normal filtration and regular vacuuming of pool	From pump through filter media to pool
<b>BACKWASH</b> (see drawing 15)	Reverses water flow to clean filter media	From pump through filter media to valve waste/drain outlet
<b>RECIRCULATE</b> (see drawing 16)	For circulating water back to pool without going through the filter media	From pump through valve to pool bypassing the filter media
<b>DRAIN</b> (see drawing 17)	For vacuuming directly to waste, lowering pool level or to drain the pool	From pump to valve waste/drain outlet bypassing the filter media

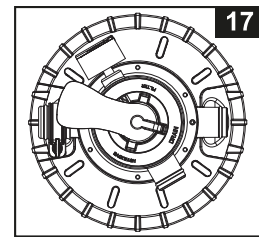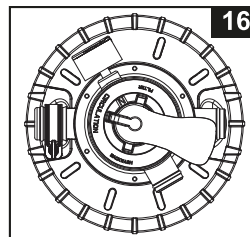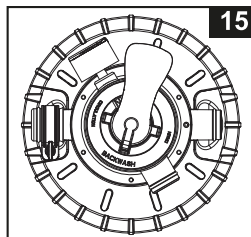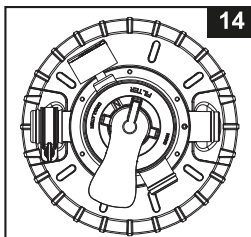

#### Control panel description:

 ON / OFF button	 LOCK / UNLOCK button	 TIMER button
---	--	--



LED Reading	Definition
00	Stand-by mode (start-up / operating cycle finished)
01	Minimum operating hour (1 hour remaining)
02-11	Operating hours (2 – 11 hours remaining)
12	Maximum operating hours (12 hours remaining)
FP	Timer OFF (pump operating continuously)
•	Power saving mode



## OPERATING INSTRUCTIONS (continued)

### Initial startup and operation:

#### Before operating, be sure that:

- All the hoses have been connected and tightened securely, and correct amount of filter sand have been loaded.
- The entire system is connected to a grounding type receptacle protected by a ground-fault circuit interrupter (GFCI) or residual current device (RCD).

1. **Release air from the system** - Ensure the drain/waste outlet on the 4-way valve is not covered and directed to a proper draining receptacle, and the pump is off. Turn the 4-way valve to the "N" position and unscrew the air release valve (14) from the motor housing (see drawing 18). When water starts flowing out of the air release valve hole, close the air release valve back.
2. **BACKWASH** - Ensure the pump is off, depress the 4-way valve and turn it to the "BACKWASH" position (see drawings 15 & 19). **IMPORTANT: To prevent damage to the 4-way valve, always depress the valve handle before turning. Always switch off pump before changing the 4-way valve position.**
3. Press  to switch on the system, and then press  to set the operating TIMER hours (see "Operating the system under TIMER mode or manually" section for details). Water is circulating backward through the sand media and to waste/drain outlet. Backwash until a clear flow of water is observed in the waste/drain outlet.

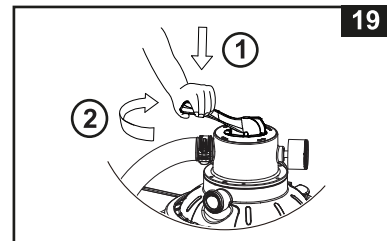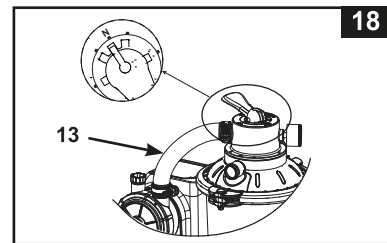

**NOTE:** If the LED display flashes "00", the device is in stand-by mode and the pump will not operate. The initial backwash of the filter is recommended to remove any impurities or fine sand particles in the sand media.

4. Switch off the pump, change the 4-way valve to "FILTER" position (see drawing 14).
5. Switch on the pump. The system is now operating in the normal filtering mode. Run the pump until the desired pool water clearance is obtained and no more than 12 hours per day. For the initial startup, it is recommended setting the system to a longer TIMER operating hours or "FP" for the pump to operate continuously without the TIMER.
6. Record the initial pressure gauge reading when the filter media is clean.
 

**NOTE:** During initial setup of the system, it may be necessary to backwash frequently due to unusual heavy dirt present in the water and sand. After that, as the filter removes dirt and impurities from the pool water, the accumulated dirt in the sand media will cause the pressure to rise and the flow to diminish. If there is no vacuuming device attached to the system and the pressure gauge reading is in the yellow zone it is time to backwash the sand media, see "BACKWASH" under "initial startup and operation" section.


Vacuuming device (i.e. Intex auto pool cleaner) attached to the system may also cause the flow to diminish and the pressure to rise. Remove any vacuuming device from the system and check if the pressure gauge reading has dropped from the yellow zone to the green zone.
7. Monitor the pressure gauge reading, and check that the inlet and outlet openings are not obstructed on a weekly basis. If the pressure gauge indicates yellow it is time to backwash the filter media.


## OPERATING INSTRUCTIONS (continued)

### Operating the system under "TIMER" mode or manually:




#### To operate the sand filter pump in "FILTER" mode under "TIMER" control:


##### 1. Activate the unit:

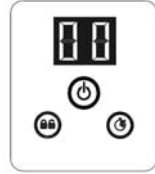Press  button. Flashing code "00" appears on the LED display, indicating that the unit is ready to be programmed.



##### 2. Set operating hours:

With code "00" flashing, press  button to set the desired operating hours. See the "Operating Time Table" for the required operating hours related to each pool size. Pressing  will increase the time from 01 to 12 hours maximum. If you have selected too many hours keep pressing  to repeat the cycle. The built-in timer will now activate the Sand filter pump, at the same time each day, for the number of hours you have set.

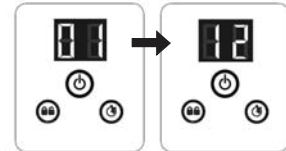

(1 to 12 hours max per cycle)


##### 3. Lock keypad controls:

With the desired hour value showing, press  button until you hear a "beep". Locking the control buttons into this setting prevents unauthorized changing of the operating cycle.

**NOTE: If you forget to lock the keypad controls, the system will automatically lock it and start working 10 seconds later.**


The sand filter pump is now filtering the water and will stop after the operating hours are completed.

##### 4. Readjust operating time if necessary:


The operating hours can be re-adjusted if necessary. Press  button until you hear a "beep" to unlock the keypad and the current programmed time will flash. Repeat steps 2 to 3.

##### 5. Stand-by/power saving mode:

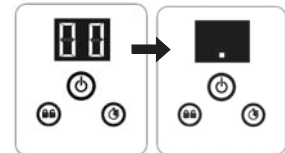


- When the cycle ends, the LED display shows "00". The system is now in Stand-By mode. After 5 minutes the system goes into Power Saving mode and the LED display shows ".". The system will automatically turn itself back on in 24 hours.
- While the system is in Power Saving mode, press any button and the system will briefly display the programmed time and then "00".



#### To view the TIMER preset hours:

While the pump is operating, press "" button, the display will briefly flash the preset hours for 10 seconds and then display back the remaining operating hours.

#### To operate the sand filter pump manually (without the "TIMER" mode):

1. To run the pump alone without the "Timer", press  button to turn on the pump, then press  button until the LED displays "FP", this indicates that the TIMER is off and the pump is now operating continuously.
2. To stop the pump, press  button again.



## INTEX POOLS OPERATING TIME TABLE (WITHOUT INTEX SALTWATER SYSTEM)

This table shows the required operating time for average use of the sand filter pump with above ground pools.

If the system is attached to an "Intex Saltwater System" unit, the filter pump running time should be longer than the required operating time of the Intex Saltwater System unit.

Pool Size	Water Capacity (Calculated at 90% for Frame Pool and 80% for Easy Set & Oval Pool)		Sand filter pump operating time (For one cycle) / (Hours)	
	(Gals)	(Liters)		
<b>INTEX ABOVE GROUND POOLS (AGP's)</b>				
<b>EASY SET® POOL</b>	183cm x 51cm (6' x 20")	232	880	1
	244cm x 61cm (8' x 24")	513	1942	1
	244cm x 76cm (8' x 30")	639	2419	2
	305cm x 61cm (10' x 24")	813	3077	2
	305cm x 76cm (10' x 30")	1018	3853	2
	366cm x 76cm (12' x 30")	1485	5621	3
	396cm x 84cm (13' x 33")	1926	7290	4
	457cm x 84cm (15' x 33")	2587	9792	5
	457cm x 107cm (15' x 42")	3284	12430	6
<b>ROUND METAL FRAME POOL</b>	457cm x 122cm (15' x 48")	3736	14141	7
	244cm x 51cm (8' x 20")	483	1828	1
	305cm x 76cm (10' x 30")	1185	4485	3
	366cm x 76cm (12' x 30")	1718	6503	4
<b>ULTRA FRAME POOL</b>	457cm x 122cm (15' x 48")	4440	16805	8
	305cm x 76cm (10' x 30")	1185	4485	3
	366cm x 76cm (12' x 30")	1718	6503	4
	366cm x 99cm (12' x 39")	2270	8592	5
	427cm x 107cm (14' x 42")	3357	12706	7
	457cm x 107cm (15' x 42")	3861	14614	7
<b>PRISM FRAME™ RECT. POOL</b>	457cm x 122cm (15' x 48")	4440	16805	8
	300cm x 175cm x 80cm (9'10" x 5'9" x 31½")	935	3539	2
	400cm x 200cm x 100cm (13'1½" x 6'6¾" x 39½")	1806	6836	4
	400cm x 200cm x 122cm (13'1½" x 6'6¾" x 48")	2224	8418	4
<b>SMALL RECT. FRAME POOL</b>	488cm x 244cm x 107cm (16' x 8' x 42")	2873	10874	6
	220cm x 150cm x 60cm (7'2½" x 4'11" x 23½")	439	1662	1
	260cm x 160cm x 65cm (8'6½" x 5'3" x 25½")	603	2282	2
	300cm x 200cm x 75cm (9'10" x 6'6¾" x 29½")	1013	3834	2
	450cm x 220cm x 84cm (14'9¼" x 7'2½" x 33")	1883	7127	4

NOTE: The timer setting has an additional 10 minutes over the actual setting.

## NON-INTEX POOLS OPERATING TIME TABLE

This table shows the required operating time for average use of the sand filter pump with above ground pools.

Water Capacity		Sand filter pump operating time (For one cycle)
(Gals)	(Liters)	
1000	3785	2
1500	5678	3
2000	7570	4
2500	9463	5
3000	11355	6
3500	13248	7
4000	15140	8
4500	17033	8

## POOL CARE & CHEMICALS

- All pools require care to keep the water clear and hygienically clean. With proper chemical control, your filter will help attain this objective. Consult your pool supply dealer for instructions regarding the proper use of chlorine, algaecide and other chemical agents required for sparkling clear water.
- Keep pool chemicals away from children.
- Do not replenish chemicals in pool while pool is occupied. Skin or eye irritations could occur.
- Daily pH checking and chemical treatment of the water is very important and cannot be overemphasized. Chlorine, algaecide and maintenance of proper pH levels are required when filling the pool as well as during the season. Consult your local swimming pool supply store for instructions.
- The season's first filling of the pool may have brackish water requiring extra water additives and extra filtering time. Do not allow swimming in pool until the pH level is balanced. Consult your local swimming pool supply store for instructions.
- Chlorinated water may damage lawns, gardens or shrubbery as children play in the pool and splash water outside the pool. Lawn areas underneath the pool liner will be destroyed. Note that some types of grass may grow through the liner.
- Filter run time depends on pool size, weather and usage level. Experiment with various run times so as to produce clean clear water.
- European standard EN16713-3 lists some additional pool water quality and water treatment information that can be found at [www.intexcorp.com/support](http://www.intexcorp.com/support).

### ⚠ CAUTION

**Concentrated chlorine solutions may damage the pool liner. Always follow the chemical manufacturer's directions, and the health and hazard warnings.**

## LONG TERM STORAGE & WINTERIZATION

### ⚠ CAUTION

**Allowing the water to freeze will damage the sand filter and void the warranty.**

1. Before emptying your pool for long term storage, or relocation, be sure the water is directed towards an acceptable drain water receptacle away from the house. Check local regulations for specific directions regarding disposal of swimming pool water.
2. Switch off the unit, and disconnect power cord from electrical outlet.
3. When the pool is empty, disconnect all hoses from pump and remove the strainers from the pool wall.
4. In a counter clockwise motion unscrew the drain valve cap (9) from the drain valve to thoroughly drain the tank. The drain valve is located at the bottom of the filter tank.
5. Disassemble the pump motor from the tank base.
6. Leave sand filter pump pieces and hoses outside to thoroughly air dry.
7. Coat the following o-rings with petroleum jelly for long term storage:
  - Hose o-rings (6).
  - Air release valve o-ring (15).
8. Depress the 4-way valve handle and rotate so as to set the pointer on the valve top "N" position. This allows the water to drain from the valve. Leave the 4-way valve in this inactive position.
9. It is best to place all dry pieces and pump motor in the original packaging for storage. To avoid condensation or corrosion problem, do not cover or wrap pump motor with plastic bags.
10. Store the pump motor and accessories in a dry place. The storage's temperature should be controlled, between 0 degrees Celsius (32 degrees Fahrenheit) and 40 degrees Celsius (104 degrees Fahrenheit).
11. Cover the tank with a tarpaulin or plastic sheet to protect it from the weather.

## TROUBLESHOOTING GUIDE

TROUBLE	CAUSE	SOLUTION
FILTER MOTOR FAILS TO START	<ul style="list-style-type: none"> <li>The motor is not plugged in.</li> <li>The GFCI/RCD circuit breaker is tripped.</li> <li>Motor too hot and overload protection is shut off.</li> </ul>	<ul style="list-style-type: none"> <li>Line cord must be plugged into a 3 wire outlet that is protected by a Class A Ground Fault Circuit Interrupter, or RCD.</li> <li>Reset circuit breaker. If circuit breaker trips repeatedly, your electrical system may have a defect. Turn off circuit breaker and call an electrician to correct the problem.</li> <li>Let the motor cool down and restart again.</li> </ul>
FILTER DOESN'T CLEAN POOL	<ul style="list-style-type: none"> <li>Improper chlorine or pH levels.</li> <li>No filtering media in tank.</li> <li>Wrong 4-way valve setting position.</li> <li>Excessively dirty pool.</li> <li>The strainer screen is restricting the water flow.</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the chlorine and pH level. Consult your local swimming pool supply stores.</li> <li>Load with filter sand, see "sand loading instructions".</li> <li>Set valve to "FILTER" position.</li> <li>Operate the filter for longer periods.</li> <li>Clean the strainer screen at the inlet.</li> </ul>
FILTER DOESN'T PUMP WATER OR FLOW IS VERY SLOW	<ul style="list-style-type: none"> <li>Trapped air in the system.</li> <li>Clogged inlet or discharge.</li> <li>An air leak on the intake line.</li> <li>Excessively dirty pool.</li> <li>Sand media clogged with dirt.</li> <li>Nozzle and strainer connections are reversed.</li> <li>Crusting or caking on the filtering sand surface.</li> <li>Pool vacuuming device attached to the system.</li> <li>Inlet threaded air connector connected to the wrong hole on the liner.</li> </ul>	<ul style="list-style-type: none"> <li>Release the air, see operating instructions section.</li> <li>Clear any obstructions in the intake hose by discharging it inside pool wall.</li> <li>Tighten hose clamps, check hoses for damage, check pool water level.</li> <li>Backwash filter.</li> <li>Install the nozzle at the upper position of the pool inlet, and the strainer at the lower position of the pool outlet.</li> <li>Remove about 1" of sand if necessary.</li> <li>Remove any pool vacuuming device attached to the system line.</li> <li>Make sure the inlet threaded air connector is connected to the pool inlet upper hole.</li> </ul>
PUMP DOESN'T WORK	<ul style="list-style-type: none"> <li>Low water level.</li> <li>Strainer screen clogged up.</li> <li>An air leak on the intake hose.</li> <li>Faulty motor or the impeller is jammed.</li> </ul>	<ul style="list-style-type: none"> <li>Fill pool to correct water level.</li> <li>Clean strainer screens at pool inlet.</li> <li>Tighten hose clamps, check hose for damage.</li> <li>Contact Intex service center.</li> </ul>
4-WAY VALVE/ COVER LEAKING	<ul style="list-style-type: none"> <li>Sand tank o-ring missing.</li> <li>Sand tank o-ring dirty.</li> <li>Flange clamp not tight.</li> <li>4-way valve damage.</li> </ul>	<ul style="list-style-type: none"> <li>Remove 4-way valve cover and ensure the o-ring is in place.</li> <li>Clean sand tank o-ring with garden hose water.</li> <li>Tighten securely.</li> <li>Contact Intex service center.</li> </ul>
HOSE LEAKING	<ul style="list-style-type: none"> <li>Hose clamps are not well-fitted.</li> <li>Hose o-ring dislodged when connecting the hose.</li> <li>Hose broken.</li> </ul>	<ul style="list-style-type: none"> <li>Tighten or reinstall hose clamps.</li> <li>Put the o-ring back into the groove.</li> <li>Replace a new hose.</li> </ul>
TIMER IS INACCURATE OR TIMER CAN'T BE SET	<ul style="list-style-type: none"> <li>Possible inner timer defective.</li> </ul>	<ul style="list-style-type: none"> <li>Turn off the pump and restart 5 minutes later.</li> <li>Re-set the timer.</li> <li>Contact Intex service center.</li> </ul>
PRESSURE GAUGE DOESN'T WORK	<ul style="list-style-type: none"> <li>Clogged inlet of the pressure gauge.</li> <li>Pressure gauge damage.</li> </ul>	<ul style="list-style-type: none"> <li>Clear any obstructions in the intake by unscrewing it from the 4-way valve.</li> <li>Contact Intex service center.</li> </ul>
SAND IS FLOWING BACK INTO THE POOL	<ul style="list-style-type: none"> <li>Sand is too small.</li> <li>Sand bed is calcified.</li> </ul>	<ul style="list-style-type: none"> <li>Use only No. 20 silica sand with particle size range 0.45 to 0.85 mm (0.018 to 0.033 inches) and a Uniformity Coefficient less than 1.75.</li> <li>Change sand.</li> </ul>
AIR JET VALVE LEAKING	<ul style="list-style-type: none"> <li>Air jet valve is not tight and facing up.</li> <li>Air jet valve internal seal blocked.</li> <li>Air jet valve internal seal dirty.</li> <li>Air jet valve broken.</li> </ul>	<ul style="list-style-type: none"> <li>Tighten air jet valve and make sure it's facing up.</li> <li>Turn pump ON and run for few seconds, then turn OFF, repeat 3 times.</li> <li>Remove air jet valve, flush dirt out with water and replace valve back.</li> <li>Replace a new air jet valve.</li> </ul>
SMALL LEAK FROM AIR JET VALVE WHEN PUMP IS ON	<ul style="list-style-type: none"> <li>Accessories attached to the water circulation line.</li> </ul>	<ul style="list-style-type: none"> <li>Remove all the accessories (such as solar mat, auto pool cleaner, LED light) from the water circulation line and place the air jet valve cap (26) over the air jet valve (25). Do not cover the air jet valve (25) with the valve cap (26) under normal situation or when the pump is operating.</li> </ul>

## COMMON POOL PROBLEMS

PROBLEM	DESCRIPTION	CAUSE	SOLUTION
ALGAE	<ul style="list-style-type: none"> <li>Greenish water.</li> <li>Green or black spots on pool liner.</li> <li>Pool liner is slippery and/or has a bad odor.</li> </ul>	<ul style="list-style-type: none"> <li>Chlorine and pH levels need adjustment.</li> </ul>	<ul style="list-style-type: none"> <li>Super chlorinate with shock treatment. Correct pH to your pool store's recommended level.</li> <li>Vacuum pool bottom.</li> <li>Maintain proper chlorine level.</li> </ul>
COLORED WATER	<ul style="list-style-type: none"> <li>Water turns blue, brown, or black when first treated with chlorine.</li> </ul>	<ul style="list-style-type: none"> <li>Copper, iron or manganese in water being oxidized by the added chlorine.</li> </ul>	<ul style="list-style-type: none"> <li>Adjust pH level to the recommended level.</li> <li>Run filter until water is clear.</li> </ul>
FLOATING MATTER IN WATER	<ul style="list-style-type: none"> <li>Water is cloudy or milky.</li> </ul>	<ul style="list-style-type: none"> <li>"Hard water" caused by a too high pH level.</li> <li>Chlorine content is low.</li> <li>Foreign matter in water.</li> </ul>	<ul style="list-style-type: none"> <li>Correct the pH level. Check with your pool dealer for advice.</li> <li>Adjust the chlorine level.</li> </ul>
CHRONIC LOW WATER LEVEL	<ul style="list-style-type: none"> <li>Level is lower than on previous day.</li> </ul>	<ul style="list-style-type: none"> <li>Rip or hole in pool liner or hoses.</li> <li>The drain valves are loose.</li> </ul>	<ul style="list-style-type: none"> <li>Repair with a patch kit.</li> <li>Finger tighten all caps.</li> </ul>
SEDIMENT ON POOL BOTTOM	<ul style="list-style-type: none"> <li>Dirt or sand on pool floor.</li> </ul>	<ul style="list-style-type: none"> <li>Heavy use, getting in and out of pool.</li> </ul>	<ul style="list-style-type: none"> <li>Use Intex pool vacuum to clean of pool.</li> </ul>
SURFACE DEBRIS	<ul style="list-style-type: none"> <li>Leaves, insects etc.</li> </ul>	<ul style="list-style-type: none"> <li>Pool too close to trees.</li> </ul>	<ul style="list-style-type: none"> <li>Use Intex pool skimmer.</li> </ul>

## GENERAL AQUATIC SAFETY

**Water recreation is both fun and therapeutic. However, it involves inherent risks of injury and death. To reduce your risk of injury, read and follow all product, package and package insert warnings and instructions. Remember, however, that product warnings, instructions and safety guidelines cover some common risks of water recreation, but do not cover all risks and or dangers.**

**For additional safeguards, also familiarize yourself with the following general guidelines as well as guidelines provided by nationally recognized Safety Organizations:**

- Demand constant supervision. A competent adult should be appointed as a "lifeguard" or water watcher, especially when children are in and around the pool.
- Learn to swim.
- Take the time to learn CPR and first aid.
- Instruct anyone who is supervising pool users about potential pool hazards and about the use of protective devices such as locked doors, barriers, etc.
- Instruct all pool users, including children what to do in case of an emergency.
- Always use common sense and good judgement when enjoying any water activity.
- Supervise, supervise, supervise.

## LIMITED WARRANTY

Your Sand Filter Pump has been manufactured using the highest quality materials and workmanship. All Intex products have been inspected and found free of defects prior to leaving the factory. This limited warranty applies only to the Sand Filter Pump and accessories listed below.

This limited warranty is in addition to, and not a substitute for, your legal rights and remedies. To the extent that this warranty is inconsistent with any of your legal rights, they take priority. For example, consumer laws across the European Union provide statutory warranty rights in addition to the coverage you receive from this limited warranty: for information on EU-wide consumer laws, please visit the European Consumer Center website at [http://ec.europa.eu/consumers/ecc/contact\\_en/htm](http://ec.europa.eu/consumers/ecc/contact_en/htm).

The provisions of this limited warranty apply only to the original purchaser and are not transferable. This limited warranty is valid for the period noted below from the date of the initial retail purchase. Keep your original sales receipt with this document, as proof of purchase will be required and must accompany warranty claims or the limited warranty will be invalid.

Sand Filter Pump Warranty – 2 Years  
Hoses & Fittings Warranty – 180 days

If you find a manufacturing defect in the Sand Filter Pump during the warranty periods noted above, please contact the appropriate Intex Service Center listed in the separate “Authorized Service Centers” sheet. If the item is returned as directed by the Intex Service Center, the Service Center will inspect the item and determine the validity of the claim. If the item is covered by the provisions of the warranty, the item will be repaired or replaced, with the same or comparable item (at Intex’s choice) at no charge to you.

Other than this warranty, and other legal rights in your country, no further warranties are implied. To the extent possibly in your country, in no event shall Intex be liable to you or any third party for direct or consequential damages arising out of the use of your Sand Filter Pump, or Intex or its agents’ and employees’ actions (including the manufacture of the product). If your country does not allow the exclusion or limitation of incidental or consequential damages, this limitation or exclusion does not apply to you.

You should note that this limited warranty does not apply in the following circumstances:

- If the Sand Filter Pump is subject to negligence, abnormal use or application, accident, improper operation, improper voltage or current contrary to operating instructions, improper maintenance or storage;
- If the Sand Filter Pump is subject to damage by circumstances beyond Intex’s control, including but not limited to, ordinary wear and tear and damage caused by exposure to fire, flood, freezing, rain, or other external environmental forces;
- To parts and components not sold by Intex; and/or
- To unauthorized alterations, repairs or disassembly to the Sand Filter Pump by anyone other than Intex Service Center personnel.

The costs associated with the loss of pool water, chemicals or water damage are not covered by this warranty. Injury or damage to any property or person is not covered by this warranty.

Read the owner’s manual carefully and follow all instructions regarding proper operation and maintenance of your Sand Filter Pump. Always inspect your product prior to use. This limited warranty will be void if use instructions are not followed.